TOSHIBA

Important Safeguards

> Velcome to Toshiba

Connecting
your TV

Using the Remote Contro

your TV

Using the TV'
Features

Appendix

OWNER'S MANUAL

Color Television

FSTPURE®

COLOR STREAM®

27AF46C

© 2006 TOSHIBA CORPORATION All Rights Reserved

Owner's Record

The model number and serial number are on the back of your TV. Record these numbers in the spaces below. Refer to these numbers whenever you communicate with your Toshiba dealer about this TV.

Model number:

Serial number:

J3N12621A(E) COVER

12/05, 9:43 AM

aleguarus

Dear Customer,

Thank you for purchasing this Toshiba TV. This manual will help you use the many exciting features of your new TV. **Before operating the TV, please read this manual completely**, and keep it nearby for future reference.

Safety Precautions

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.







WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



The lightning symbol in the triangle tells you that the voltage inside this product may be strong enough to cause an electric shock. DO NOT TRY TO SERVICE THIS PRODUCT YOURSELF.



The exclamation mark in the triangle tells you that important operating and maintenance instructions follow this symbol.

CAUTION: To reduce the risk of electric shock, do not use the polarized plug with an extension cord, receptacle, or other outlet unless the blades can be inserted completely to prevent blade exposure.

NOTE TO CATY INSTALLERS

This is a reminder to call the CATV system installer's attention to Article 820-40 of the U.S. NEC, which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical. For additional antenna grounding information, see items 25 and 26 on page 4.

NOTICE OF POSSIBLE ADVERSE EFFECTS ON TV PICTURE DISPLAY

If a fixed (non-moving) pattern or image remains on the TV screen for extended periods of time, the image can become permanently ingrained in the cathode ray tube(s) of the TV and cause subtle but permanent ghost images. This type of damage is NOT COVERED BY YOUR WARRANTY. (See item 33 on page 4 for details.)

Child Safety

It Makes A Difference Where Your TV Stands



Congratulations on your purchase! As you enjoy your new TV, keep these safety tips in mind:

The Issue

- ☐ If you are like most consumers, you have a TV in your home. Many homes, in fact, have more than one TV.
- ☐ The home theater entertainment experience is a growing trend, and larger TVs are popular purchases; however, they are not always supported on the proper TV stands.
- Sometimes TVs are improperly secured or inappropriately situated on dressers, bookcases, shelves, desks, audio speakers, chests, or carts. As a result, TVs may fall over, causing unnecessary injury.

Toshiba Cares!

☐ The consumer electronics industry is committed to making home entertainment enjoyable and safe.

☐ The Consumer Electronics
Association formed the Home
Entertainment Support Safety
Committee, comprised of TV and
consumer electronics furniture
manufacturers, to advocate
children's safety and educate
consumers and their families about
television safety.

Tune Into Safety

☐ One size does NOT fit all! Use appropriate furniture large enough to support the weight of your TV (and other electronic components).

- ☐ Use appropriate angle braces, straps, and anchors to secure your furniture to the wall (but never screw anything directly into the TV).
- ☐ Carefully read and understand the other enclosed instructions for proper use of this product.
- ☐ Do not allow children to climb on or play with furniture
- ☐ Avoid placing any item on top of your TV (such as a VCR, remote control, or toy) that a curious child may reach for.
- ☐ Remember that children can become excited while watching a program and can potentially push or pull a TV over.
- ☐ Share our safety message about this hidden hazard of the home with your family and friends. Thank you!



2500 Wilson Blvd. Arlington, VA 22201 U.S.A. Tel. 703-907-7600 Fax 703-907-7690 www.CE.org

CEA is the Sponsor, Producer and Manager of the International CES®

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.



Do not use this apparatus near water.



- 6) Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.



8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.



9) Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding

two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.



10) Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where it exits the apparatus.



- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



 Unplug this apparatus during lightning storms or when unused for long periods of time.



14) **Refer all servicing to qualified service personnel.**Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not

operate normally, or has been dropped.

15) CAUTION: To reduce the risk of electric shock, do not use the polarized plug with an extension cord, receptacle, or other outlet unless the blades can be inserted completely to prevent blade exposure.

Installation, Care, and Service

Installation

Follow these recommendations and precautions and heed all warnings when installing your TV:

16) Never modify this equipment. Changes or modifications may void: a) the warranty, and b) the user's authority to operate this equipment under the rules of the Federal Communications Commission.

DANGER: RISK OF SERIOUS PERSONAL INJURY, DEATH, OR EQUIPMENT DAMAGE! Never place the TV on an unstable cart, stand, or table. The TV may fall, causing serious personal injury, death, or serious damage to the TV.

18) Never place or store the TV in direct sunlight; hot, humid areas; areas subject to excessive dust or vibration; or locations with temperatures at or below 41°F (5°C).




19) Always place the TV on the floor or a sturdy, level, stable surface that can support the weight of the unit.




Never place items such as vases, aquariums, or candles on top of the TV.



- 21) Never block or cover the slots or openings in the TV cabinet back, bottom, and sides. Never place the TV:
 - on a bed, sofa, rug, or similar surface:
 - too close to drapes, curtains, or walls; or
 - in a confined space such as a bookcase, built-in cabinet, or any other place with poor ventilation.






- 22) Never allow anything to rest on or roll over the power cord, and never place the TV where the power cord is subject to wear or abuse.
- 23) Never overload wall outlets and extension cords.



24) Always operate this equipment from a 120V AC, 60 Hz power source only.



25) Always make sure the antenna system is properly grounded to provide adequate protection against voltage surges and built-up static charges (see Section 810 of the National Electric Code).

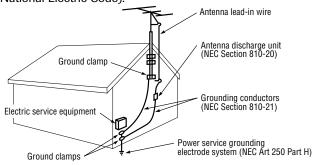

DANGER: RISK OF SERIOUS PERSONAL INJURY OR DEATH!

• Use extreme care to make sure you are never in a position where your body (or any item you are in contact with, such as a ladder or screwdriver) can accidentally touch overhead power lines. Never locate the antenna near overhead power lines or other electrical circuits.

• Never attempt to install any of the following during lightning activity:

a) an antenna system; or b) cables, wires, or any home theater component connected to an antenna or phone system.

Care

For better performance and safer operation of your TOSHIBA TV, follow these recommendations and precautions:

- 27) Always sit approximately 10–25 feet away from the TV and as directly in front of it as possible. The picture can appear dull if you sit too far to the left or right of the TV, or if sunlight or room lights reflect on the screen. Turn the TV off to check for reflections on the screen, and then remove the source of reflections while viewing the TV.
- 28) Always unplug the TV before cleaning. Never use liquid or aerosol cleaners.



29) WARNING: RISK OF ELECTRIC SHOCK!

Never spill liquids or push objects of any kind into the TV cabinet slots.

- 30) [This item applies to projection TVs only.] If the air temperature rises suddenly (for example, when the TV is first delivered), condensation may form on the lenses. This can make the picture appear distorted or the color appear faded. If this happens, turn off the TV for 6 to 7 hours to allow the condensation to evaporate.
- 31) For added protection of your TV from lightning and power surges, always unplug the power cord and disconnect the antenna from the TV if you leave the TV unattended or unused for long periods of time.
- 32) During normal use, the TV may make occasional snapping or popping sounds. This is normal, especially when the unit is being turned on or off. If these sounds become frequent or continuous, unplug the power cord and contact a Toshiba Authorized Service Center.
- 33) Possible Adverse Effects on TV Picture Display: If a fixed (non-moving) pattern or image remains on the TV screen for extended periods of time, the image can become permanently ingrained in the cathode ray tube(s) of the TV and cause subtle but permanent ghost images. This type of damage is NOT COVERED BY YOUR WARRANTY. Never leave the TV on for extended periods of time while it is displaying the following images or formats:
 - Fixed Images, including but not limited to PIP/POP windows, closed captions, video game patterns, TV station logos, stock tickers, and websites.
 - Special Formats that do not use the entire screen, including but not limited to widescreen or letterbox format media viewed on a 4:3 aspect ratio display (with gray or black bars at the top and bottom of the screen); or 4:3 aspect ratio format media viewed on a widescreen/16:9 aspect ratio display (with gray or black bars on the left and right sides of the screen).

Service

WARNING: RISK OF ELECTRIC
SHOCK! Never attempt to service the
TV yourself. Opening and
removing the covers may expose
you to dangerous voltage or other
hazards. Refer all servicing to a
Toshiba Authorized Service Center.

35) If you have the TV serviced:

 Ask the service technician to use only replacement parts specified by the manufacturer.

Upon completion of service, ask the service technician to perform routine safety checks to determine that the TV is in safe operating condition.

ONLY AUTHORIZED REPLACEMENT PARTS!

36) When the TV reaches the end of its useful life, ask a qualified service technician to properly dispose of the TV. Improper disposal may result in a picture tube implosion and possible personal injury.



Welcome to Toshiba Exploring your new TV Selecting a location for the TV Connecting your TV Connecting a VCR Connecting a VCR Connecting a vable converter box Connecting a vable converter box Connecting a DVD player/satellite receiver and a VCR Connecting a DVD player with ColorStream™ (component video) and a VCR Sonnecting a DVD player with ColorStream™ (component video) and a VCR Sonnecting a DVD player with ColorStream™ (component video) and a VCR Sonnecting a DVD player with ColorStream™ (component video) and a VCR Sonnecting a component of the control of the contr	Important Safety Information	2-4
Exploring your new TV Selecting a location for the TV Connecting your TV Connecting a VCR Connecting a CVB Connecting a DVD player/satellitle receiver and a VCR Connecting a DVD player with ColorStream® (component video) and a VCR Second of Connecting a DVD player with ColorStream® (component video) and a VCR Connecting a DVD player with ColorStream® (component video) and a VCR Connecting a CVB		
Connecting your TV Connecting a VCR Connecting a Cable converter box Connecting a cable converter box Connecting a DVD player/satellitle receiver and a VCR Connecting a DVD player with ColorStream® (component video) and a VCR Sonnecting a DVD player with ColorStream® (component video) and a VCR Connecting a Cambridge with ColorStream® (component video) and a VCR Connecting a camcorder Connecting a cambridge camcorder Connecting a cambridge camcorder Connecting a camcorder Conne		
Connecting a VCR. Connecting a Cable converter box Connecting a DVD player/satallite receiver and a VCR. Connecting a DVD player with ColorStream® (component video) and a VCR. Sconnecting a Connecting a Connecting a Connecting an audio amplifier Connecting and an audio amplifier Connecting and an audio and an audio and audio	Selecting a location for the TV	6
Connecting a VCR. Connecting a Cable converter box Connecting a DVD player/satallite receiver and a VCR. Connecting a DVD player with ColorStream® (component video) and a VCR. Sconnecting a Connecting a Connecting a Connecting an audio amplifier Connecting and an audio amplifier Connecting and an audio and an audio and audio	Connecting your TV	7
Connecting a cDVD player/satellitle receiver and a VCR Connecting a DVD player with ColorStream® (component video) and a VCR Connecting two VCIs Connecting two VCIs Connecting an audio amplifier Using the remote control Using the remote control for use Installing the remote control between the volume to the v		
Connecting a DVD player with ColorStream® (component video) and a VCR Connecting a DVD player with ColorStream® (component video) and a VCR Connecting a camcorder Connecting a camcorder Connecting a naudio amplifier Using the remote control Preparing the remote control for use Installing the remote control batteries Il lastalling the remote control to departe your other devices Il Programming the remote control to operate your other devices Il Programming the remote control to operate your other devices Il Programming the remote control to operate your other devices Il Programming the remote control to operate your other devices Il Setting up your TV Is Setting up your TV Setting up your a control to the vice of the		
Connecting a camcorder	Connecting a DVD player/satellite receiver and a VCR	9
Connecting a naudio amplifier	Connecting a DVD player with ColorStream® (component video) and a VCR	9
Connecting an audio amplifier		
Using the remote control 11 Preparing the remote control for use 11 Installing the remote control to operate your other devices 11 Programming the remote control to operate your other devices 12 VCR, DVD player, and cable TV converter codes 13 Learning about the remote control 14 Setting up your TV 15 Changing the on-screen display language 15 Adding channels to the TV's memory 16 Adding channels automatically 16 Adding channels to the TV's memory 16 Changing channels 16 Changing channels manually 16 Changing channels 16 Using the TV's features 17 Adjusting the channel settings 17 Switching between two channels 17 Programming your favorite channels 17 Using the LOCK menu 18 Selecting a PIN code 18 Locking channels 19 Locking the Game Timer™ 20 Labeling the Came Timer™ 20 Setting the Game Time		
Preparing the remote control for use		
Installing the remote control batteries	Using the remote control	. 11
Using the remote control to operate your other devices		
Programming the remote control to operate your other devices		
VCR, DVD player, and cable TV converter codes 13 Learning about the remote control 14 Setting up your TV 15 Changing the on-screen display language 15 Adding channels to the TV's memory 16 Programming channels automatically 16 Adding and erasing channels manually 16 Changing channels settings 16 Changing channels settings 17 Adjusting the channel settings 17 Switching between two channels 17 Programming your favorite channels 17 Using the LOCK menu 18 Selecting a PIN code 18 Locking video input 20 Setting the GameTimer™ 20 Labeling channels 21 Setting the ON/OFF timer 22 Setting the ON/OFF timer 22 Setting the oft timer 22 Setting the oft timer 23 Adjusting the picture quality 24 Specifying the ColorStream® setting 24 Specifying the Sound acquire 25 Changing the specifyer quality 24		
Learning about the remote control 14 Setting up your TV 15 Changing the on-screen display language 15 Adding channels to the TV's memory 16 Programming channels automatically 16 Adding and erasing channels manually 16 Changing channels 16 Using the TV's features 17 Adjusting the channel settings 17 Switching between two channels 17 Programming your favorite channels 17 Using the LOCK menu 18 Selecting a PIN code 18 Locking channels 19 Locking video input 20 Setting the Game Timer™ 20 Labeling channels 21 Setting the Goke 22 Setting the on ViDFF timer 22 Setting the off timer 22 Setting the off timer 23 Adjusting the picture quality 24 Watching video input 24 Specifying the ColorStream® setting 24 Specifying the ColorStream® setting 24 Setting the sleep timer 25 <td>VCP, DVD player, and pable TV converter codes</td> <td> 12 10</td>	VCP, DVD player, and pable TV converter codes	12 10
Setting up your TV 15 Changing the on-screen display language 15 Adding channels to the TV's memory 16 Programming channels automatically 16 Adding and erasing channels manually 16 Changing channels 16 Using the TV's features 17 Adjusting the channel settings 17 Adjusting the channel settings 17 Switching between two channels 17 Programming your favorite channels 17 Using the LOCK menu 18 Selecting a PIN code 18 Locking channels 19 Locking ideo input 20 Setting the GameTimer™ 20 Setting the clock 22 Setting the clock 22 Setting the on timer 24 Specifying the ColorStream® setting 24 Using the clock acquitin feature 25 <td></td> <td></td>		
Changing the on-screen display language		
Adding channels to the TV's memory		
Programming channels automatically		
Adding and erasing channels manually		
Changing channels 16 Using the TV's features 17 Adjusting the channel settings 17 Switching between two channels 17 Programming your favorite channels 17 Using the LOCK menu 18 Selecting a PIN code 18 Locking channels 19 Locking ideo input 20 Setting the GameTimer™ 20 Setting the GameTimer™ 20 Labeling channels 21 Setting the ON/OFF timer 22 Setting the ON/OFF timer 22 Setting the off timer 22 Setting the picture quality 24 Watching video input 24 Specifying the ColorStream® setting 24 Specifying the ColorStream® setting 24 Displaying on-screen information 24 Setting the sleep timer 25 Using the closed caption feature 25 Changing the picture size 25 Adjusting the sound 26 Muting the sound 26 Selecting stereo/SAP broadcasts 26 Adju		
Using the TV's features 17 Adjusting the channel settings 17 Switching between two channels 17 Programming your favorite channels 17 Using the LOCK menu 18 Selecting a PIN code 18 Locking channels 19 Locking video input 20 Setting the GameTimer™ 20 Labeling channels 21 Setting the clock 22 Setting the ontimer 22 Setting the off timer 22 Setting the off timer 23 Adjusting the picture quality 24 Watching video input 24 Specifying the ColorStream® setting 24 Specifying the ColorStream® setting 24 Specifying the Seep timer 25 Using the sleep timer 25 Using the picture size 25 Adjusting the picture size 25 Adjusting the sound 26 Selecting stereo/SAP broadcasts 26 Adjusting the sound feature 27 Using the BBE sound feature 28 Using the S		
Adjusting the channel settings 17 Switching between two channels 17 Programming your favorite channels 17 Using the LOCK menu 18 Selecting a PIN code 18 Locking channels 19 Locking video input 20 Setting the GameTimer™ 20 Labeling channels 21 Setting the clock 22 Setting the on timer 22 Setting the on timer 22 Setting the off timer 23 Adjusting the picture quality 24 Watching video input 24 Specifying the ColorStream® setting 24 Specifying the EcolorStream® setting 24 Setting the sleep timer 25 Using the closed caption feature 25 Changing the picture size 25 Adjusting the sound 26 Muting the sound 26 Selecting stereo/SAP broadcasts 26 Selecting the sound quality 27 Using the BBE sound feature 27 Using the StableSound® feature 28 U		
Switching between two channels 17 Programming your favorite channels 17 Using the LOCK menu 18 Selecting a PIN code 18 Locking channels 19 Locking video input 20 Setting the GameTimer™ 20 Labeling channels 21 Setting the clock 22 Setting the ON/OFF timer 22 Setting the on timer 22 Setting the picture quality 23 Adjusting the picture quality 24 Watching video input 24 Specifying the ColorStream® setting 24 Specifying the ColorStream® setting 24 Displaying on-screen information 24 Setting the sleep timer 25 Using the sleep timer 25 Using the sleep timer 25 Using the sound 26 Muting the sound 26 Selecting stereo/SAP broadcasts 26 Adjusting the sound quality 27 Using the BBE sound feature 28 Using the stableSound® feature 28 Using the		
Programming your favorite channels 17 Using the LOCK menu 18 Selecting a PIN code 18 Locking channels 19 Locking video input 20 Setting the GameTimer™ 20 Labeling channels 21 Setting the clock 22 Setting the ON/OFF timer 22 Setting the off timer 23 Adjusting the picture quality 24 Watching video input 24 Specifying the ColorStream® setting 24 Displaying on-screen information 24 Specifying the sleep timer 25 Using the sleep timer 25 Using the closed caption feature 25 Changing the picture size 25 Adjusting the sound 26 Selecting stereo/SAP broadcasts 26 Adjusting the sound quality 27 Using the BBE sound feature 27 Using the StableSound® feature 28 Using the StableSound® feature 28 Using the StableSound® feature 28 Understanding the Power Return feature 28		
Using the LOCK menu 18 Selecting a PIN code 18 Locking channels 19 Locking video input 20 Setting the GameTimer™ 20 Labeling channels 21 Setting the clock 22 Setting the ON/OFF timer 22 Setting the on timer 22 Setting the picture quality 24 Watching video input 24 Specifying the ColorStream® setting 24 Specifying the ColorStream® setting 24 Displaying on-screen information 24 Setting the sleep timer 25 Using the sleep timer 25 Using the sleep timer 25 Changing the picture size 25 Adjusting the sound 26 Selecting stereo/SAP broadcasts 26 Adjusting the sound quality 27 Using the BBE sound feature 27 Using the stableSound® feature 28 Using the StableSound® feature 28 Understanding the Power Return feature 28 Understanding the Power Return feature 28		
Šelecting a PIN code 18 Locking channels 19 Locking video input 20 Setting the GameTimer™ 20 Labeling channels 21 Setting the clock 22 Setting the ON/OFF timer 22 Setting the off timer 22 Setting the off timer 23 Adjusting the picture quality 24 Watching video input 24 Specifying the ColorStream® setting 24 Displaying on-screen information 24 Setting the sleep timer 25 Using the closed caption feature 25 Changing the picture size 25 Adjusting the sound 26 Muting the sound 26 Selecting stereo/SAP broadcasts 26 Adjusting the sound quality 27 Using the BBE sound feature 27 Using the StableSound® feature 28	Using the LOCK menu	18
Locking video input 20 Setting the GameTimer™ 20 Labeling channels 21 Setting the clock 22 Setting the ON/OFF timer 22 Setting the on timer 22 Setting the picture quality 23 Adjusting the picture quality 24 Watching video input 24 Specifying the ColorStream® setting 24 Displaying on-screen information 24 Setting the sleep timer 25 Using the closed caption feature 25 Changing the picture size 25 Adjusting the sound 26 Muting the sound 26 Muting the sound quality 27 Using the BBE sound feature 27 Using the StableSound® feature 28 Using the StableSound® feature 28 Auto power off 28 Understanding the Power Return feature 28 Appendix 7 Troubleshooting 29 Specifications 30		
Setting the GameTimer™ 20 Labeling channels 21 Setting the clock 22 Setting the ON/OFF timer 22 Setting the on timer 22 Setting the off timer 23 Adjusting the picture quality 24 Watching video input 24 Specifying the ColorStream® setting 24 Displaying on-screen information 24 Setting the sleep timer 25 Using the closed caption feature 25 Changing the picture size 25 Adjusting the sound 26 Muting the sound 26 Selecting stereo/SAP broadcasts 26 Adjusting the sound quality 27 Using the BBE sound feature 27 Using the StableSound® feature 28 Using the StableSound® feature 28 Auto power off 28 Understanding the Power Return feature 28 Appendix 29 Troubleshooting 29 Specifications 30	Locking channels	19
Labeling channels 21 Setting the clock 22 Setting the ON/OFF timer 22 Setting the on timer 22 Setting the off timer 23 Adjusting the picture quality 24 Watching video input 24 Specifying the ColorStream® setting 24 Displaying on-screen information 24 Setting the sleep timer 25 Using the lossed caption feature 25 Changing the picture size 25 Adjusting the sound 26 Muting the sound 26 Selecting stereo/SAP broadcasts 26 Adjusting the sound quality 27 Using the BBE sound feature 27 Using the surround sound feature 28 Using the StableSound® feature 28 Auto power off 28 Understanding the Power Return feature 28 Appendix 29 Troubleshooting 29 Specifications 30	Locking video input	20
Setting the ON/OFF timer 22 Setting the on timer 22 Setting the off timer 22 Setting the picture quality 24 Watching video input 24 Specifying the ColorStream® setting 24 Displaying on-screen information 24 Setting the sleep timer 25 Using the closed caption feature 25 Changing the picture size 25 Adjusting the sound 26 Muting the sound 26 Selecting stereo/SAP broadcasts 26 Adjusting the sound quality 27 Using the BBE sound feature 27 Using the StableSound® feature 28 Using the StableSound® feature 28 Auto power off 28 Understanding the Power Return feature 28 Appendix 29 Troubleshooting 29 Specifications 30		
Setting the ON/OFF timer 22 Setting the on timer 23 Setting the off timer 23 Adjusting the picture quality 24 Watching video input 24 Specifying the ColorStream® setting 24 Displaying on-screen information 24 Setting the sleep timer 25 Using the closed caption feature 25 Changing the picture size 25 Adjusting the sound 26 Muting the sound 26 Selecting stereo/SAP broadcasts 26 Adjusting the sound quality 27 Using the BBE sound feature 27 Using the strableSound® feature 28 Using the StableSound® feature 28 Auto power off 28 Understanding the Power Return feature 28 Appendix 29 Troubleshooting 29 Specifications 30		
Setting the on timer 22 Setting the off timer 23 Adjusting the picture quality 24 Watching video input 24 Specifying the ColorStream® setting 24 Displaying on-screen information 24 Setting the sleep timer 25 Using the closed caption feature 25 Changing the picture size 25 Adjusting the sound 26 Muting the sound 26 Selecting stereo/SAP broadcasts 26 Adjusting the sound quality 27 Using the BBE sound feature 27 Using the surround sound feature 28 Using the StableSound® feature 28 Auto power off 28 Understanding the Power Return feature 28 Appendix 29 Troubleshooting 29 Specifications 30	Setting the clock	22
Setting the off timer		
Adjusting the picture quality		
Watching video input		
Specifying the ColorStream® setting Displaying on-screen information Setting the sleep timer Setting the closed caption feature Using the closed caption feature Changing the picture size Adjusting the sound Muting the sound Selecting stereo/SAP broadcasts Adjusting the sound quality Using the BBE sound feature Using the BBE sound feature Using the StableSound® feature Selecting stereo/SAP broadcasts Auto power off Selecting stereo/SAP broadcasts Selecting stereo/SAP broadca		
Displaying on-screen information	Specifying the ColorStream® setting	24
Setting the sleep timer	Displaying on-screen information	24
Using the closed caption feature		
Adjusting the sound		
Muting the sound		
Selecting stereo/SAP broadcasts		
Adjusting the sound quality	Muting the sound	26
Using the BBE sound feature		
Using the surround sound feature		
Using the StableSound® feature		
Auto power off		
Understanding the Power Return feature 28 Appendix 29 Troubleshooting 29 Specifications 30		
Appendix		
Troubleshooting		
Specifications		
	,	




Congratulations! You have purchased one of the finest color TVs on the market. The goal of this manual is to guide you through setting up and operating your Toshiba TV as quickly as possible.

You may need to purchase other audio or video cables to connect your equipment. See "Connecting your TV" on page 7 for more information.


Please read all the safety and operating instructions carefully before you begin.

Exploring your new TV

You can operate your TV by using the buttons on the front panel or the remote control. The front and back panels provide all the inputs you will need to connect other equipment to your TV.

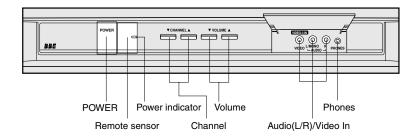


TV front panel

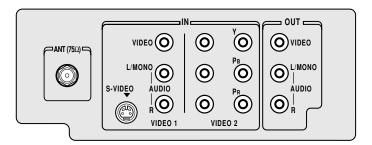

TV back panel

Selecting a location for the TV


- Place the TV on the floor or on a sturdy platform in a location where light does not directly hit the screen.
- Place the TV far enough from the walls to allow proper ventilation.
 Inadequate ventilation may cause overheating, which may damage the TV.






Connecting your TV

- A coaxial cable is the standard cable that comes in from your antenna or cable converter box. Coaxial cables use "F" connectors.
- Standard A/V (audio/video) cables are usually color coded according to use: vellow for video and red and white for audio. The red audio cable is for the stereo right channel, and the white audio cable is for the stereo left (or mono) channel. If you look at the rear panel of the TV, you will see that the terminals are color coded in the same manner as the cables.
- An S-video cable provides better picture performance than a standard video cable. S-video cables can only be used with S-video compatible components.
- · Component video cables come in sets of three and provide the best picture performance. Component video cables can only be used with component video compatible components.

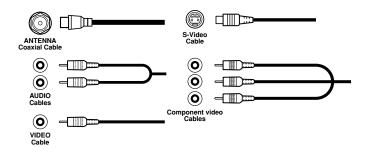

Connecting a VCR

This connection allows you to watch local channels and video programs, play or record on the VCR while watching TV, and record from one channel while watching another channel.

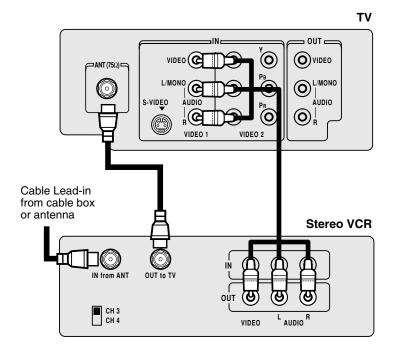

You will need:

- · two coaxial cables
- · one set of standard A/V cables

Note:

If using a mono VCR, connect L/Mono to VCR Audio OUT using only one audio cable. For better picture quality, if your VCR has S-video, you can use an S-video cable instead of the standard video cable. Do not connect a standard video cable and an S-video cable to VIDEO1 simultaneously.


NOTICE: RISK OF

all equipment.

EQUIPMENT DAMAGE! Do not plug in any power cords until you have finished connecting

The unauthorized recording, use, distribution or revision of television programs, videotapes, DVDs, and other materials is prohibited under the Copyright Laws of the United States and other countries, and may subject you to civil and criminal liability.

7





J3N12621A(E)_P07-16



This television has an extended tuning range and can tune most cable channels without using a cable company supplied converter box. Some cable companies offer "premium pay channels" in which the signal is scrambled. Descrambling these signals for normal viewing requires the use of a descrambler device, which is generally provided by the cable company.

For Subscribers to Basic Cable TV Service

For basic cable service not requiring a Converter/Descrambler box, connect the CATV 75 ohm Coaxial Cable directly to the Antenna Jack on the back of the television.

For Subscribers to Scrambled Cable TV Service

If you subscribe to a cable service that requires the use of a Converter/ Descrambler box, connect the incoming cable to the Converter/ Descrambler box and connect the output of the box to the Antenna Jack on the back of the television. Follow the connections shown below. Set the television to the output of the Converter/Descrambler box (usually channel 3 or 4) and use the Converter/Descrambler box to select channels.


For Subscribers to Unscrambled Basic Cable with Scrambled Premium Channels

If you subscribe to a cable service in which basic cable channels are unscrambled and premium channels require the use of a Converter/ Descrambler box, you may wish to use a two-set signal splitter (sometimes called a "two-set coupler") and an A/B Switch box from the cable installer or an electronics supply store. Follow the connections shown below. With the switch in the "B" position, you can directly tune any nonscrambled channels on your TV. With the switch in the "A" position, tune your TV to the output of the Converter/Descrambler box (usually channel 3 or 4) and use the box to tune scrambled channels.

Note:

When you use a converter box with your TV, there may be features that you cannot program using the remote control, such as labeling channels, blocking channels, and programming your favorite channels.


Incoming CATV

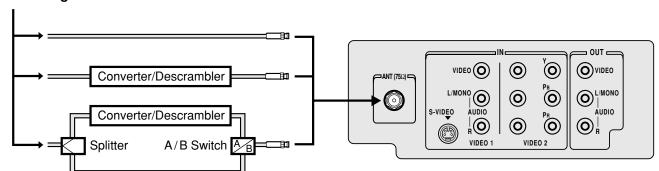



Connecting a DVD player/satellite receiver and a VCR


This connection allows you to watch DVD/satellite, VCR, or TV programs. You can record from the satellite receiver and TV, as well as record one TV channel while watching another channel.

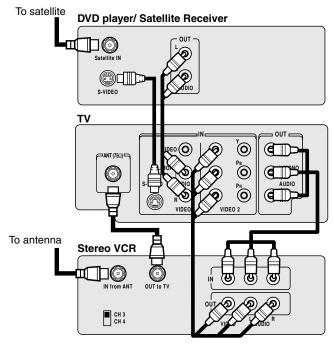

Connecting a DVD player with ColorStream® (component video) and a VCR

This connection allows you to watch DVD, VCR, or TV programs and record TV programs. You can record from one source while watching a program from another source. Your TV is capable of using ColorStream (component video). Connecting your TV to a component video compatible DVD player, such as a Toshiba DVD player with ColorStream®, can greatly enhance picture quality and performance.

DVD player with ColorStream®

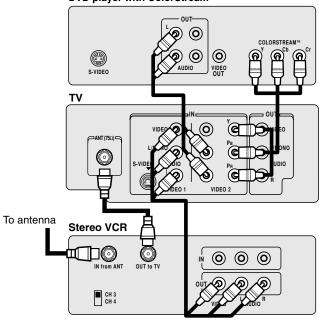

You will need:

- · three coaxial cables
- · two sets of standard A/V cables
- one S-video cable
- one pair of standard audio cables

You can use a standard video cable instead of the S-video cable, but the picture quality will decrease. If you use an S-video cable between the TV and DVD player/satellite receiver, make the audio connections only and remove the standard video cable.

You will need:

- two coaxial cables
- · one set of standard A/V cables
- one set of component video cables
- · one pair of standard audio cables

The ColorStream inputs on this TV are for use with devices that output 480i interlaced signals ONLY. This TV will not accept or display 480p or 720p progressive scan signals or 1080i interlaced high-definition signals. If you connect a high-definition settop receiver, 480p progressive scan DVD player, or other similar device to the TV's ColorStream inputs, YOU MUST SWITCH THE DEVICE'S OUTPUT TO 480i INTER-LACED MODE FIRST. Failure to do this will cause a poor picture or no picture to display.

The unauthorized recording, use, distribution or revision of television programs, videotapes, DVDs, and other materials is prohibited under the Copyright Laws of the United States and other countries, and may subject you to civil and criminal liability.

9


J3N12621A(E)_P07-16 6/12/05, 9:46 AM





This connection allows you to record (dub/edit) from one VCR to another VCR.

You will also be able to record from one TV channel while watching another channel.

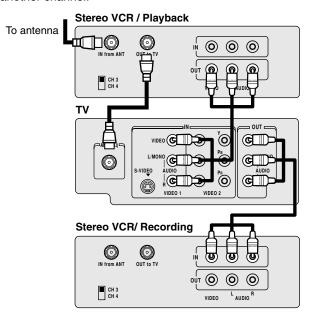

You will need:


- · two coaxial cables
- two sets of standard A/V cables

Note:

Do not connect the same VCR to the output and input jacks on the TV at the same time. For better picture quality, if your VCR has S-video, you can use an S-video cable instead of the standard video cable. Do not connect a standard video cable and an S-video cable to VIDEO1 simultaneously.

Connecting a camcorder

This connection allows you to watch video materials recorded on a camcorder.

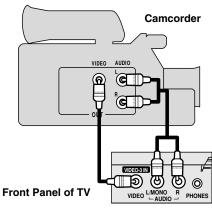

You will need:

· one set of standard A/V cables


Note:

For better picture quality, if your camcorder has S-video, you can connect an S-video (and standard audio cables) to VIDEO1 on the back of the TV. Do not connect a standard video cable and an S-video cable to VIDEO1 simultaneously.

Connecting an audio amplifier

This connection allows you to use an audio amplifier to enjoy high quality sound. This also allows you to use external speakers.

To control the audio, turn on the TV and the stereo amplifier.

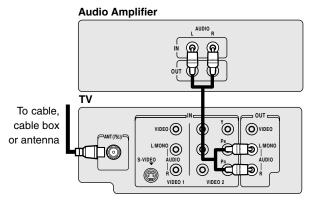

You will need:

- · one coaxial cable
- · one pair of audio cables

The unauthorized recording, use, distribution or revision of television programs, videotapes, DVDs, and other materials is prohibited under the Copyright Laws of the United States and other countries, and may subject you to civil and criminal liability.

10

6/12/05, 9:46 AM







Using the remote control


Preparing the remote control for use

With the remote control, you can operate your TV, most VCR and DVD player models, and cable TV converters together, even if they are different brands. If you will be using your TV with a Toshiba VCR or DVD player, your remote control is already programmed and ready to use. If you own different brands of VCRs, DVD players and/or converters, you first have to program your remote control. (See "Programming the remote control to operate your other devices" on page 12.)


Installing the remote control batteries

To install the batteries:

1. Open the battery cover on the back of the remote control.



2. Install two "AAA" size batteries. Match the + and - signs on the batteries to the signs on the battery compartment.



3. Close the battery cover on the remote control until the lock snaps.

Note:

The TV remote control may not operate your VCR, DVD player, or cable TV converter. Refer to the owner's manual supplied with the applicable equipment to see which features may be available. Additionally, the remote control for this TV may not support certain features available on the original remote controls for such additional equipment, in which case, it is suggested that you use the original remote control for the applicable device.

Caution:


· Never throw batteries into a fire.

Notes:

- · Be sure to use AAA size batteries.
- Dispose of batteries in a designated disposal area.
- Batteries should always be disposed of with the environment in mind. Always dispose of batteries in accordance with applicable laws and regulations.
- If the remote control does not operate correctly, or if the operating range becomes reduced, replace batteries with new ones.
- · When necessary to replace batteries in the remote control, always replace both batteries with new ones. Never mix battery types or use new and used batteries in combination.
- · Always remove batteries from remote control if they are dead or if the remote control is not to be used for an extended period of time. This will prevent battery acid from leaking into the battery compartment.


Using the remote control to operate your other devices

To control a VCR: Program the remote control to recognize the brand of your VCR (see "Programming the remote control to operate your other devices" on page 12). The buttons shown at right will then control the VCR. Press the VCR button first.

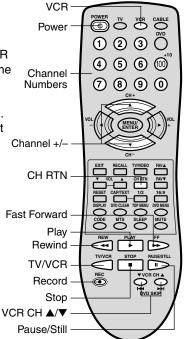

To control a DVD player:


Program the remote control to recognize the brand of your DVD player (see "Programming the remote control to operate your other devices" on page 12). The buttons shown at right will then control the DVD player. Press the DVD button first.

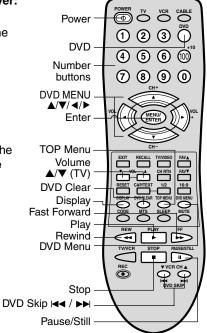



To control a cable TV converter:

Program the remote control to recognize the brand of your converter (see "Programming the remote control to operate your other devices" below). The buttons shown at right will control the cable TV converter. Press the CABLE button first.

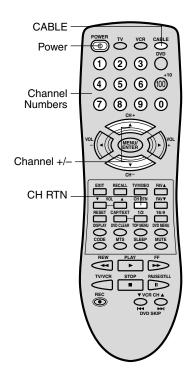


Programming the remote control to operate your other devices

This remote control is pre-programmed to operate Toshiba VCRs and DVD players. To control VCRs, DVD players, or cable converters other than Toshiba models, you must follow the steps below to program your remote control.

- 1. While holding down the CODE button, press the button for the device you want to control (VCR, DVD, or CABLE).
- 2. Enter the 2-digit code listed on page 13 using the Number buttons (0-9) within 10 seconds.
- 3. Point the remote control at the VCR, DVD player, or converter and press POWER to test the code.
 - If the VCR, DVD player, or converter turns on, you have entered the right code.

If the VCR, DVD player, or converter does not respond to the remote control, you may have entered the wrong code. Repeat steps 1 and 2 using another code.

For future reference, write down t	he codes you used:
VCR code	
DVD player code	
Cable TV converter code	

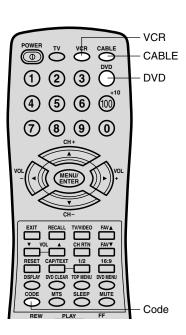

Notes:

- · When shipped from the factory, the remote control is set to operate your TV.
- If you do not enter the code within 10 seconds from step 1 or if you enter a code not listed on page 13, this operation is canceled.
- · Each time you replace the batteries, you must reprogram the remote control.
- · Some newer VCRs are capable of working on either of two remote codes. These VCRs have a switch labeled "VCR1/VCR2." If your VCR has this kind of switch and does not respond to any of the codes for your VCR, set the switch to the other position (VCR1 or VCR2) and reprogram the remote control.





VCR, DVD player, and cable TV converter codes

VCR			
Admiral	08, 61	Multi Tech	39
Adventura	31	NEC	02, 18
Aiwa	31	Orion	33, 50
Akai	23, 38, 41	Panasonic	14, 51, 59
Audio Dynamics	02, 18	Pentax	15
Bell & Howell	06, 47	Philco	07, 14
Broksonic	21, 26, 33, 50, 55	Philips	07, 14, 27
Canon	14	Pioneer	10, 15
Citizen	09	Portland	46
Craig	12	Pro Scan	16, 60
Curtis Mathes	14, 59	Quasar	14, 59
Daewoo	44, 46, 48, 54	RCA	15, 16, 20, 27, 40, 42, 60
Daytron	36, 46	Realistic	06, 08, 12, 14, 31
DBX	02, 18	Samsung	20, 30
Emerson	03, 21 23, 26, 33, 35, 43, 50	Sansui	39
Fisher	11, 12, 13, 47	Sanyo	06, 12, 47
Funai	31	Scott	04, 05, 33, 43
General Electric	14, 16, 20	Sears	06, 09, 11, 12, 15
Goldstar	09	Sharp	08, 61
Go Video	56, 62, 63	Shintom	39
Hitachi	15, 57	Signature 2000	08, 14, 16, 19, 31, 49
Instant Replay	14, 27	Sony	17, 32, 37
J.C. Penney	14, 15, 18, 27	Sylvania	07, 14, 27
JVC	02, 25, 58	Symphonic	31
Kenwood	02	Tashiko	09
Logik	39	Tatung	02
LXI	09, 31	Teac	02, 31
Magnavox	07, 14, 31	Teknika	34
Marantz	07, 18	Toshiba	05, 15
Marta	09	XR1000	39
Memorex	06, 12, 14, 31, 33	Vector Research	04, 18
Mitsubishi	04, 22, 52, 64	Yamaha	02, 18
Montgomery Ward	08, 14, 16, 19, 31, 49	Zenith	01, 24, 25, 29, 37

DVD PLAYER			
Aiwa	23	RCA	01,06
Apex	20	Saba	01
Denon	00, 17	Sampo	14
Ferguson	01	Samsung	10
Hitachi	11	Sharp	08
JVC	09	Silvania	32, 18
Kenwood	15, 29	SMC	25
Konka	19	Sony	04, 26, 27, 28
Mitsubishi	05	Technics	00
Nordmende	01	Thomson	01
Onkyo	21	Toshiba	03
Oritron	24	Wave	22
Panasonic	00	Yamaha	00, 30
Philips	03, 16	Zenith	07, 12
Pioneer	02	Vialta	31
Raite	13	Funai	32, 18

CABLE TV CONVERTER			
Allegro	58, 62	RCA DSS	73
Allegro A/B Switch	61	Regency	29
Gemini	05, 31, 38	Samsung	35
General Electric	67	Scientic Atlanta	16, 23, 36, 64
General Instrument	05, 06	Sprucer	13
Hamlin	02, 03, 45, 65, 66	Standard Comp	35
Jerrold	04, 07, 08, 09, 10, 18, 60, 63	Texscan	39, 56, 71
Kale Vision	35	Tocom	17, 18, 46
Macom	14, 21	Unika	48, 62
Magnavox	34	United Satellite	44
NSC	35, 39, 68, 69, 70	Universal	58, 62
Oak	11, 32, 42	Vid Tech	40
Panasonic	13, 20	Video Way	49
Paragon	33	Viewstar	54, 55, 72
Philips	47, 50, 52, 54, 55	Zenith	01, 53, 74
Pioneer	15, 43	Zenith Satellite	12, 28, 30, 51



POWER turns the TV on and off

SLEEP programs the TV to turn off at a set time (page 25)

TV/VIDEO selects the video input source (page 24)

CH + / – cycles through programmed channels (page 16)

TV/VCR/CABLE/DVD selects TV, VCR, Cable, or DVD mode (page 11)

CHANNEL NUMBERS allow direct access to channels (page 16)

VOLUME + / - adjusts the volume level

CH RTN (Channel Return) returns to the last viewed channel (page 17) Numbers

MENU/ENTER allows access to programming menus, and sets programmed menu information (page 15)

FAV ▲/ ▼ (Favorite Channels) cycle through favorite channels (page 17)

RESET returns settings to preset factory formats (pages 24 and 27)

CAP/TEXT turns closed captions or text on and off (page 25)

1/2 selects closed caption/text channel 1 or 2 (page 25)

MUTE turns off the sound (page 26)

MTS switches among STEREO, SAP, and MONO sound (page 26)

RECALL displays status information on-screen (page 24)

CODE is used to program the remote control (page 12)

EXIT closes on-screen menus (page 15)

16:9 toggles the aspect ratio between 4:3 (letterbox) and 16:9 (wide screen) modes (page 25)

STOP stops a videotape/DVD

REC starts recording a videotape

PLAY plays a videotape/DVD

FF fast forwards a videotape/DVD

REW rewinds a videotape/DVD

PAUSE/STILL pauses a videotape/DVD

TV/VCR toggles between TV and VCR modes when viewing while recording

VCR CHANNEL ▲ and ▼ cycle through programmed VCR channels

DVD SKIP ► skips DVD chapter


DISPLAY displays DVD status information on-screen

VOLUME ▲/▼ (DVD) adjust the DVD volume level

DVD CLEAR clears input data in DVD mode

TOP MENU accesses the DVD TOP menu

DVD MENU accesses the DVD menu

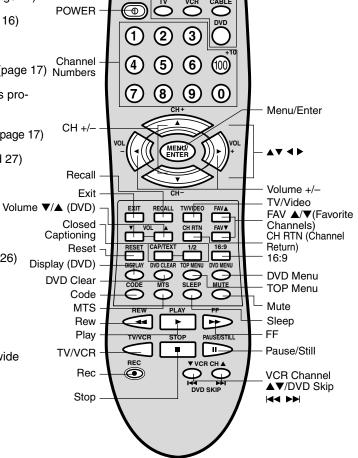

TV/VCR/CABLE/DVD

Setting up your TV

After you have installed the batteries and programmed the remote control, you need to set some preferences on the TV using the menu system. You can access the menu system with the buttons on the remote control.


- When you make a menu selection, your changes occur immediately. You do not have to press MENU or EXIT to see your changes.
- After 15 seconds, the menu screen will automatically close if you do not make a selection. Your changes will still be saved.
- When you are finished programming the menus, press EXIT.

Changing the on-screen display language


You can choose from three different languages (English, French, and Spanish) for the on-screen display of adjustment menus and messages.

To select a language:


1. Press MENU, then press ◀ or ▶ until the OPTION menu appears.

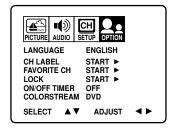

2. Press ▲ or ▼ to highlight LANGUAGE.

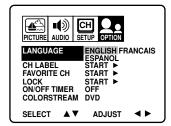


3. Press ◀ or ▶ to highlight your desired language.

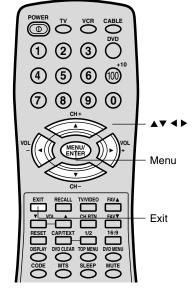

15

J3N12621A(E)_P07-16



When you press CH +/- on the remote control or CHANNEL ∇/Δ on the TV front panel, your TV will stop only on the channels stored in the TV's channel memory. Follow the steps below to program channels into the memory.


Programming channels automatically

Your TV can automatically detect all active channels and store them in its memory. After the TV has stored the channels in its memory automatically, you can add or erase specific channels manually.

To add channels automatically:

- 1. Press MENU, then press ◀ or ▶ to display the SETUP menu.
- 2. Press ▲ or ▼ until the TV/CABLE selection is highlighted.
- Press ◀ or ▶ to highlight either TV or CABLE, depending on which you use.

If you use an antenna, choose TV. If you use cable, choose CABLE.

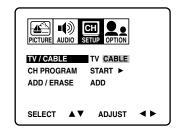

- 4. Press ▼ to select CH PROGRAM.
- Press ◀ or ▶ to start channel programming. The TV will automatically cycle through all the TV or Cable channels (depending on which you selected), and store all active channels in the channel memory.
 - While the TV is cycling through the channels, the message "PROGRAMMING NOW-PLEASE WAIT" appears.
- When channel programming is complete, the message "COMPLETED" appears.
- 7. Press CH + or to view the programmed channels.

Adding and erasing channels manually

After you have programmed the channels automatically, you can add or erase specific channels manually.

To add or erase channels manually:

- Select the channel you want to add or erase.
 If you are adding a channel, you must select the channel using the Channel Number buttons.
- 2. Press MENU, then press ◀ or ▶ to display the SETUP menu.
- Press ▲ or ▼ to highlight ADD/ ERASE.
- Press ◀ or ▶ to select ADD or ERASE, whichever function you want to perform.
- 5. Repeat steps 1–4 for other channels you want to add or erase.

TV / CABLE CABLE CH PROGRAM START > ADD / ERASE ADD ERASE SELECT A V ADJUST ADJUST A PROGRAM ADJUST A PADJUST A P

Changing channels


To change to the next programmed channel:

Press CHANNEL ∇/Δ on the TV front panel or CH +/- on the remote control.

To change to a specific channel (programmed or unprogrammed):

Press the Channel Number buttons (0–9 and 100) on the remote control

For example, to select channel 125, press 100, 2, 5.

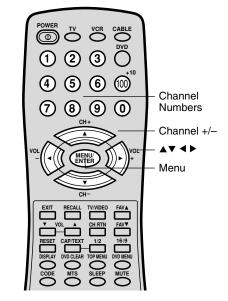



Using the TV's features

Adjusting the channel settings

Switching between two channels

You can switch between two channels without entering an actual channel number each time.

To switch between two channels:

- 1. Select the first channel you want to view.
- 2. Select a second channel using the Channel Number buttons (0-9,
- 3. Press CH RTN. The previous channel will be displayed. Each time you press CH RTN, the TV will switch back and forth between the two channels.


Programming your favorite channels

You can preset up to 12 of your favorite channels using the Favorite Channel Programming feature. Because this feature scans through only your favorite channels, it allows you to skip other channels you do not normally watch.


You can still use Channel + / - to scan through all the channels you programmed in the TV's memory.

To program your favorite channels:

- 1. Select a channel you want to program as a favorite channel.
- 2. Press MENU, then press ◀ or ▶ to display the OPTION menu.
- 3. Press ▲ or ▼ to highlight FAVORITE CH.

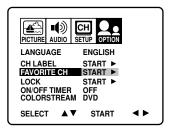

4. Press ◀ or ▶ to display the FAVORITE CH menu. SET/CLEAR will be highlighted.

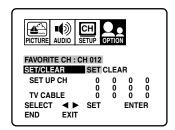



- 5. Press ◀ or ▶ to highlight SET and press ENTER.
- 6. Press EXIT to close the screen.
- 7. Repeat steps 1-6 for up to 12 channels.

To select your favorite channels:

Press the FAV ▲ ▼ buttons on the remote control to select your favorite channels.

The FAV ▲ ▼ buttons will not work until you have programmed your favorite channels.

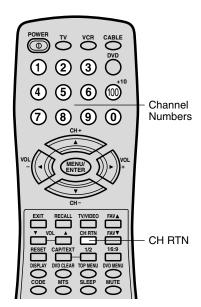

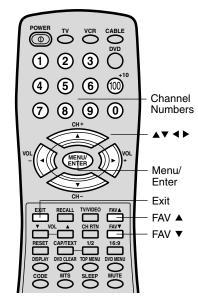


17


J3N12621A(E)_P17-26




6/12/05, 9:48 AM



- 1. Select a channel you want to clear.
- 2. Press MENU, then press ◀ or ▶ to display the OPTION menu.
- 3. Press ▲ or ▼ to highlight FAVORITE CH.
- Press ◀ or ▶ to display the FAVORITE CH menu. SET/CLEAR will be highlighted.

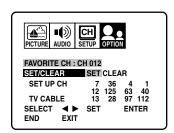

5. Press ◀ or ▶ to highlight CLEAR.

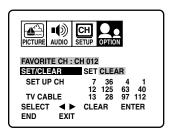

- Press ENTER until "0" replaces the channel number you want to erase.
- 7. Press EXIT to clear the screen.
- 8. Repeat steps 1-6 for the other channels.

Using the LOCK menu


The LOCK menu includes the CH LOCK, VIDEO LOCK, GAMETIMER, and NEW PIN CODE functions.

Selecting a PIN code


You can use these functions after entering the correct PIN code.


To select your PIN code and access the LOCK menus:


- 1. Press MENU, then press ◀ or ▶ to highlight the OPTION menu.
- 2. Press ▲ or ▼ to highlight LOCK.

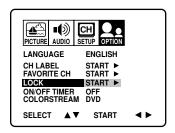

3.Press ◀ or ▶ to display the BLOCKING menu.

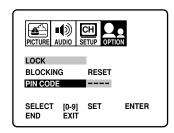

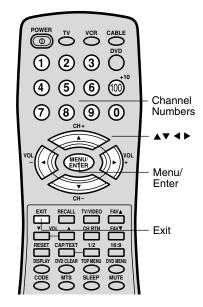


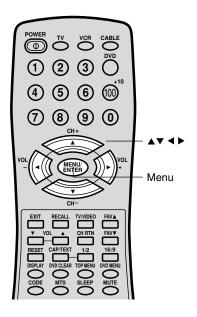





4. Use the Channel Number buttons (0–9) to enter your PIN code. If you are accessing the LOCK menus for the first time, select a four-digit number to be your PIN code. Press ENTER. The BLOCKING menu appears.

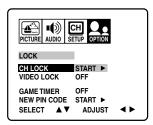

 You may now enable blocking. See "Locking channels" (below), "To change your PIN code" (below), or "Locking video input" (page 20), or "Setting the GameTimer™" (page 20).

To change your PIN code:

- 1. Press MENU, then press ◀ or ▶ to display the OPTION menu.
- 2. Press ▲ or ▼ to highlight LOCK.
- 3. Press ◀ or ▶ to display the BLOCKING menu.
- 4. Use the Channel Number buttons (0–9) to enter your PIN code. Press ENTER. The BLOCKING menu appears.
- Press ▲ or ▼ to highlight NEW PIN CODE and press ◀ or ► to display the NEW PIN CODE menu.
- Use the Channel Number buttons (0–9) to enter a new code. Press ENTER.
- 7. Press EXIT to return to normal viewing.

Locking channels


With the CH LOCK feature, you can lock specific channels. You will not be able to tune locked channels unless you clear the setting. You can choose to lock up to nine TV channels and nine cable channels.


To lock channels:

- 1. Use the Channel Number buttons (0–9, 100) to display the television channel you wish to lock.
- 2. Press MENU, then press ◀ or ▶ to display the OPTION menu.
- 3. Press ▲ or ▼ to highlight LOCK.
- 4. Press ◀ or ▶ to display the LOCK menu.
- 5. Use the Channel Number buttons (0–9) to enter your PIN code, then press ENTER. The LOCK menu appears.
- Press ▲ or ▼ to highlight CH LOCK and press ◀ or ▶ to display the CH LOCK menu.
- 7. Press ◀ or ▶ to select the following:
 - SET- to set the channel as one to be locked. Then press ENTER.
 - CLEAR

 to clear all channels from the list of locked channels.
 Then press ENTER.
- Repeat steps 1 through 7 to lock other channels. When you are finished locking channels, press EXIT to return to normal viewing.


If you try to tune a locked channel, the TV will not display it, but will display the nearest unlocked channel.




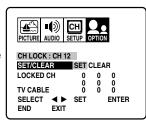

Note:

If you forget your PIN code, press RECALL four times within five seconds from the BLOCKING menu. This resets your PIN code and allows you to proceed to the BLOCKING menu.

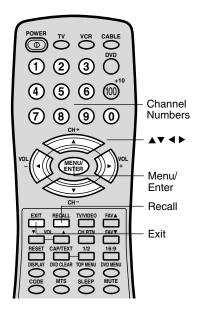

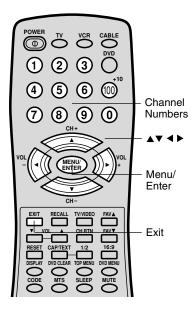

Note:

After programming CH LOCK, change channels before turning off the television.

19

J3N12621A(E)_P17-26





- 1. Press MENU, then press ◀ or ▶ to display the OPTION menu.
- 2. Press ▲ or ▼ to highlight LOCK and then press ◀ or ▶ to display the LOCK menu.
- 3. Use the Channel Number buttons (0–9) to enter your PIN code, then press ENTER. The LOCK menu appears.
- 4. Press ▲ or ▼ to highlight CH LOCK and press ◀ or ▶ to display the CH LOCK menu.
- 5. Press ◀ or ▶ to highlight CLEAR, and then press ENTER. This clears all channels from the list of locked channels.
- 6. Press EXIT to return to normal viewing.

Locking video input

With the VIDEO LOCK feature, you can lock out the input sources (VIDEO1, VIDEO2, VIDEO3, COLORSTREAM) and channels 3 and 4. You will not be able to select the input sources with the TV/VIDEO button or Channel Numbers unless you clear the setting.

To set up the video lock:

- 1. Press MENU, then press ◀ or ▶ to display the OPTION menu.
- 2. Press ▲ or ▼ to highlight LOCK.
- 3. Press ◀ or ▶ to display the LOCK menu.
- 4. Use the Channel Number buttons (0–9) to enter your PIN code, then press ENTER. The LOCK menu appears.
- 5. Press ▲ or ▼ to highlight VIDEO LOCK.
- 6. Press ◀ or ▶ to select:
 - OFF: Unlocks all video input sources.
 - VIDEO: Locks VIDEO1, VIDEO2, VIDEO3 and COLORSTREAM.
 - VIDEO +: Locks VIDEO1, VIDEO2, VIDEO3, COLORSTREAM, channel 3 and channel 4. This option should be used if you use the antenna terminal to play a video tape.
- 7. Press EXIT to return to normal viewing.


PICTURE AUDIO SETUP OPTION LOCK CH LOCK CH LOCK OFF VIDEO LOCK GAME TIMER OFF NEW PIN CODE START SELECT A ADJUST ADJUST


Setting the GameTimer™

With the GameTimer[™] feature, you can automatically activate the VIDEO LOCK feature (VIDEO setting) to set a time limit for playing a TV game (30, 60, 90 or 120 minutes).

To set up the GameTimer:


- 1. Press MENU, then press ◀ or ▶ to display the OPTION menu.
- 2. Press ▲ or ▼ to highlight LOCK.
- 3. Press ◀ or ▶ to display the LOCK menu.
- 4. Use the Channel Number buttons (0–9) to enter your PIN code, then press ENTER. The LOCK menu appears.
- 5. Press ▲ or ▼ to highlight GameTimer.
- 6. Press ◀ or ▶ to select a time limit (30 minutes, 60 minutes, 90 minutes, 120 minutes or OFF).
- 7. Press EXIT to return to normal viewing. After the GameTimer is programmed, the display will appear briefly every ten minutes to remind you that the GameTimer is operating. When the programmed time is reached, the display will change the channel automatically.



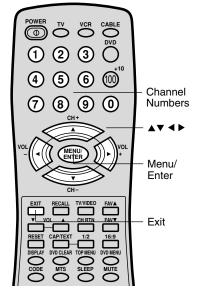


Note:

After programming VIDEO LOCK, change channels or activate the TV/VIDEO key before turning off the television.

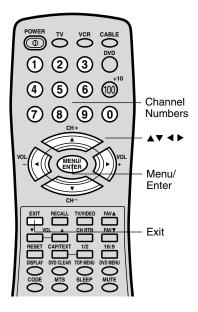








Labeling channels


Channel labels appear over the channel number display each time you turn on the TV, select a channel, or press the Recall button. You can choose any four characters to identify a channel.

To create channel labels:


- 1. Select a channel you want to label.
- 2. Press MENU, then press ◀ or ▶ until the OPTION menu appears.
- 3. Press ▲ or ▼ to highlight CH LABEL.

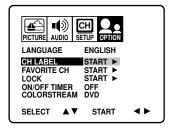

4. Press ◀ or ▶ to display the CH LABEL menu. SET/CLEAR will be highlighted.

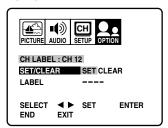


- 5. Press ◀ or ▶ to highlight SET.
- 6. Press ▲ or ▼ to highlight LABEL.

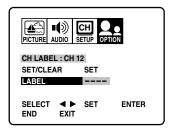

- 7. Press ◀ or ▶ to enter a character in the first space. Press the button repeatedly until the character you want appears on the screen. Press ENTER.
- 8. Repeat step 7 to enter the rest of the characters.


If you would like a blank space in the label name, you must choose a blank space from the list of characters; otherwise, a dash will appear in



- each channel.
- 10. Press EXIT to clear the screen.

To erase channel labels:

- 1. Select a channel with a label.
- 2. Press MENU, then press ◀ or ▶ until the OPTION menu appears.
- 3. Press ▲ or ▼ to highlight CH LABEL.
- 4. Press ◀ or ▶ to display the CH LABEL menu. SET/CLEAR will be highlighted.
- 5. Press ◀ or ▶ to highlight CLEAR.
- 6. Press ENTER.
- 7. Repeat steps 1-6 to erase other channel labels.



Note:

The character will change as below.

① ② ③ 〇

4 5 6 0

7890

Channel

Numbers

Menu/

Enter


Exit

Setting the clock


You must set the clock before you can program the ON/OFF timer.

To set the clock: (Example: 8:30 AM)


- 1. Press MENU, then press ◀ or ▶ to display the OPTION menu.
- 2. Press ▲ or ▼ to highlight ON/OFF TIMER.

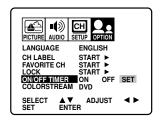

- 3. Press ◀ or ▶ to highlight SET, then press ENTER. The ON/OFF TIMER menu appears.
- 4. Press ▲ or ▼ to highlight CLOCK, then press ◀ or ▶ to highlight the hour position.



 Press ▲ or ▼ to set the hour, then press ▶ to highlight the minute position.



Press ▲ or ▼ to set the minutes, then press EXIT to return to normal viewing.


Setting the ON/OFF timer


Setting the on timer

This feature allows you to program the TV to turn on automatically at a set time. If you program the ON TIMER to "DAILY," the TV will turn on every day at the same time to the same channel until you clear the ON TIMER.

To set the on timer: (Example: Turning on the TV to channel 12 at 7:00 AM, DAILY)


- 1. Press MENU, then press ◀ or ▶ to display the OPTION menu.
- 2. Press ▲ or ▼ to highlight ON/OFF TIMER.
- 3. Press ◀ or ▶ to highlight SET, then press ENTER. The ON/OFF TIMER menu appears.
- 4. Press ▲ or ▼ to highlight ON TIMER and press ◀ or ▶ to highlight the hour position.

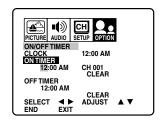

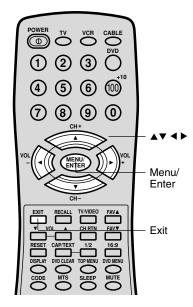

Note:

If the power source for the TV is interrupted (for example, the power cord is unplugged or a power failure occurs), you will need to reset the clock.

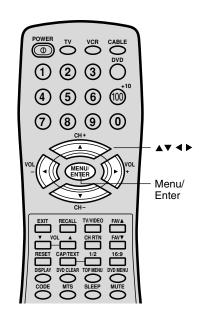


Note:

After a power failure or disconnection of the power, the timer settings will be lost.



5. Press ▲ or ▼ to set the desired hour, then press ▶.



- 6. Set the desired minutes and channel, as in step 5.
- 7. Press ◀ or ▶ to select ONCE or DAILY timer date.



8. Press EXIT to return to normal viewing.

To cancel the on timer:

Select CLEAR in step 7 above. Press EXIT to return to normal viewing.

Setting the off timer

This feature allows you to program the TV to turn off automatically at a set time. If you program the OFF TIMER to "DAILY," the TV will automatically turn off every day at the same time.


To set the off timer: (Example: Turning off the TV at 11:30 PM)

- 1. Press MENU, then press ◀ or ▶ to display the OPTION menu.
- 2. Press ▲ or ▼ to highlight ON/OFF TIMER.
- 3. Press ◀ or ▶ to highlight SET, then press ENTER.
- The ON/OFF TIMER menu appears.

 4. Press ▲ or ▼ to highlight OFF TIMER, then press ◀ or ▶ to highlight the hour position.



5. Press ▲ or ▼ to set the desired hour, then press ▶.




- 6. Set the desired minutes, as in step 5.
- 7. Press ◀ or ▶ to select ONCE or DAILY.



8. Press EXIT to return to normal viewing.


To cancel the off timer:

Select CLEAR in step 7 above. Press EXIT to return to normal viewing.

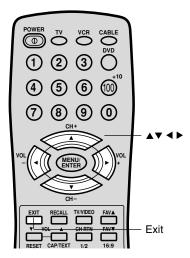


Note:

The ON TIMER has a one-hour automatic shut off. One hour after the ON TIMER has turned on the TV, the TV will turn off automatically unless you press any button .

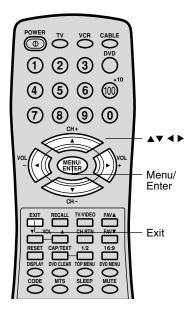

6/12/05, 9:50 AM






You can adjust the picture quality to your personal preferences, including the contrast, brightness, color, tint, and sharpness. The qualities you choose will be stored automatically in your TV's memory so you can recall them at any time.

To adjust the picture quality:

1. Press MENU, then press ◀ or ▶ to display the PICTURE menu.

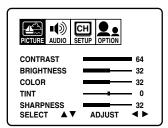

- 2. Press ▲ or ▼ until the item you want to adjust is highlighted.
- 3. Press ◀ or ▶ to adjust the level.

Selection	◆ Pres	ssing >
contrast	lower	higher
brightness	darker	lighter
color	paler	deeper
tint	reddish	greenish
sharpness	softer	sharper

4. Press EXIT to return to normal viewing.

Watching video input

You can use the TV/VIDEO button on the remote control to view a signal coming from other devices, such as VCRs or video disc players that may be connected to your TV. (See "Connecting your TV" on page 7.)

Specifying the ColorStream® setting

You can use the ColorStream (component video) input for connecting either a DVD player or a DTV receiver.

Note: This TV is not HD ready.


- Press TV/VIDEO to put the TV in ColorStream mode.
- 2. Press MENU, then press ◀ or ▶ until the OPTION menu appears.
- 3. Press ▲ or ▼ to highlight COLORSTREAM.
- Press ◀ or ▶ to highlight DVD or DTV, depending on which device is connected.
- 5. Press EXIT to return to normal viewing.

Note: The factory setting is DVD.

Displaying on-screen information

Press RECALL to display the following on-screen information:

- Clock
- Channel number or VIDEO mode selected
- Channel label (if preset)
- Stereo or SAP (second audio program) audio status



■
(i) CH


ENGLISH

ADJUST

PICTURE AUDIO

SELECT ▲▼

LANGUAGE

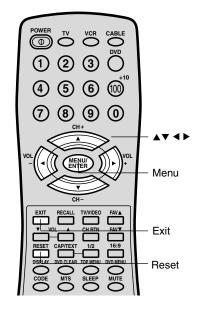


Note:

To reset the picture adjustments to the factory settings, press RESET.

To select the input mode:

Press the TV/VIDEO button repeatedly to select the desired mode. The signal source you are connected to is displayed in light blue.



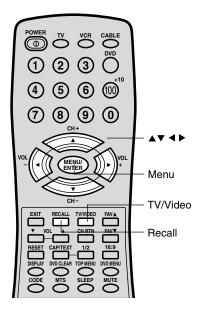





Setting the sleep timer

You can set the TV so it turns off automatically.

To set the sleep timer:

Repeatedly press SLEEP on the remote control to set the length of time until the TV turns off. The clock will count down 10 minutes for each press of the SLEEP button (120, 110, ...10, 0). After the sleep time is programmed, the display will appear briefly every ten minutes to remind you that the sleep timer is operating.

To confirm the sleep timer setting:

Press SLEEP one time. The remaining time will be momentarily displayed.

To cancel the sleep timer:


Repeatedly press SLEEP until the display turns to 0.

Using the closed caption feature


The closed caption feature has two options: captions or text. A caption is a printed version of the dialogue, narration and/or sound effects of a program. Text is information not related to the program that appears on half of the TV screen when available.

To view captions or text:

- 1. Select the desired program. Closed captioned programs are usually marked in your local TV listing as "CC."
- 2. Press CAP/TEXT repeatedly to select caption or text mode.



3. Press 1/2 to select the caption or text channel.



4. To turn off the closed caption feature, press CAP/TEXT repeatedly until captions or text no longer display on-screen.

Changing the picture size


You can change the picture size to 16:9 (widescreen) style.


To view 16:9 style:

Select the desired program, then press 16:9. The picture size will be displayed 16:9 style. "16:9" will appear on the screen for approx. 4 seconds.

To cancel 16:9 style:

Press 16:9 again. The picture size will return to 4:3 style.



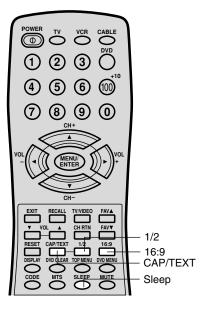

Note:

A closed caption signal may not be decoded in the following situations:

- · When a video tape has been dubbed.
- · When the signal reception is weak.
- · When the signal reception is non-standard.

When you select the text mode, the text screen always appears as a black box. When there is no signal, however, the text screen will not display text characters. Repeatedly press CAP/TEXT until the box disappears.

NOTICE OF POSSIBLE ADVERSE EFFECTS ON TV PICTURE DISPLAY

Avoid displaying stationary images on your TV screen for extended periods of time. Fixed (non-moving) patterns or images (including but not limited to PIP/POP windows, closed captions, video game patterns, TV station logos, stock tickers, websites, and special formats that do not use the entire screen) can become permanently ingrained in the cathode ray tube(s) of the TV and cause subtle but permanent ghost images. This type of damage is NOT COVERED BY YOUR WARRANTY.



Muting the sound

Press MUTE to temporarily turn off the sound. While the sound is off, the screen will display the word "MUTE" in the lower right-hand corner. To restore the sound, press MUTE again.

Selecting stereo/SAP broadcasts


You can listen to high-fidelity stereo sound with the Multi-channel TV Sound (MTS) feature. MTS can also transmit a second audio program (SAP) containing a second language or other audio information.

When the TV receives a stereo or SAP broadcast, the word STEREO or SAP appears on-screen every time the TV is turned on, the channel is changed, or the RECALL button is pressed. The MTS feature is not available in the VIDEO mode.


You can leave your TV in STEREO mode because it will automatically output stereo or monaural sound, depending on the broadcast type. If the stereo sound is noisy, select MONO to reduce the noise. The word STEREO or SAP is displayed in light blue when the TV receives the signal.

To select the desired MTS setting:

Repeatedly press the MTS button to select either STEREO, SAP, MONO+SAP, or MONO. If the current program is not available in stereo or SAP, the setting will not be available when you press the MTS button.



If the current program is not broadcasting either stereo or SAP, those settings will not be available when you press the MTS button.

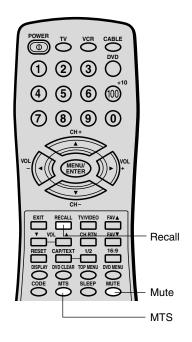






Adjusting the sound quality


You can change the sound quality of your TV by adjusting the bass, treble, and balance.

To adjust the sound quality:

1. Press MENU, then press ◀ or ▶ until the AUDIO menu appears.

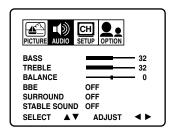

- 2. Press ▲ or ▼ to highlight the item you want to adjust.
- 3. Press ◀ or ▶ to adjust the level.

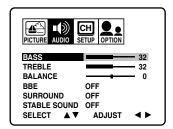


- Imakes the sound quality weaker or decreases the balance in the right channel, depending on the item selected.
- makes the sound quality stronger or decreases the balance in the left channel, depending on the item selected.

Using the BBE sound feature

By correcting the phase delay and distortion naturally generated by speaker systems, the BBE sound feature ensures that the sound that reaches your ears is as natural as the original sound. Human voices are clearer and music is natural and well-defined.


To turn on the BBE sound feature:

- 1. Press MENU, then press ◀ or ▶ until the AUDIO menu appears.
- 2. Press ▲ or ▼ to highlight BBE.
- 3. Press ◀ or ▶ to highlight ON.

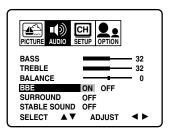


To turn off the BBE sound feature:

Highlight OFF in step 3 above.

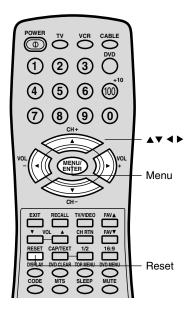

Note:

To reset your audio adjustments to the factory settings, press RESET.

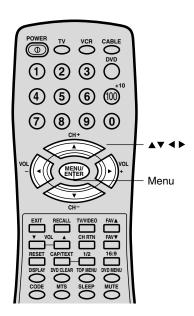

Licensed by BBE Sound, Inc. under USP5510752 and 5736897. BBE and BBE symbol are registered trademarks of BBE Sound, Inc.

27

J3N12621A(E)_P27-BACK

27

6/12/05, 9:51 AM



Using the surround sound feature


The surround sound feature expands the audio listening field wider and deeper to create exceptional sound quality from the TV's speakers. The feature uses stereo signals from a TV broadcast or video input.

To turn on the surround sound feature:

- Select the STEREO mode, if available (see "Selecting stereo/SAP broadcasts" on page 26.)
- Press MENU, and then press

 ✓ or

 ✓ until the AUDIO menu appears.
- 3. Press ▲ or ▼ to highlight SURROUND.
- 4. Press or ► to highlight ON.

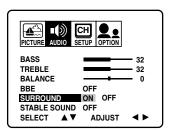

To turn off the surround sound feature:

Highlight OFF in step 4 above.


In general, you can leave your TV in surround mode because it will automatically output the type of sound being broadcast (surround stereo or monaural).

Using the StableSound® feature

The StableSound feature limits the highest volume level to prevent extreme changes in volume when the signal source is changed.

To turn on the StableSound® feature:

- 1. Press MENU, then press ◀ or ▶ until the AUDIO menu appears.
- 2. Press ▲ or ▼ to highlight STABLE SOUND.
- 3. Press ◀ or ▶ to highlight ON.

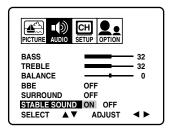

To turn off the StableSound® feature:

Highlight OFF in step 3 above.


Auto power off

The TV will automatically turn off after approximately 15 minutes if it is tuned to a vacant channel or a station that completes its broadcast for the day and stops broadcasting on that channel. This feature does not work in VIDEO mode.

Understanding the Power Return feature

If the power is cut off while you are viewing the TV and the power is resupplied, the Power Return feature will turn the TV on automatically.

If the power is going to be off for a long time or you are going to be away from the TV for a long time, unplug the power cord from the wall outlet to prevent the TV from turning on in your absence.

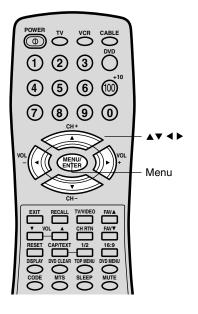







Appendix

Troubleshooting

Before calling a service technician, please check the following table for a possible cause of the problem and some solutions.

Problem	Solution	
TV will not turn on	 Make sure the power cord is plugged in, then press POWER. The remote control batteries may be dead. Replace the batteries. 	
No picture, no sound	 Check the antenna/cable connections. This TV will not accept or display 480p or 720p progressive scan signals or 1080i interlaced high-definition signals through its ColorStream inputs. Switch the other device's output to 480i interlaced mode first (see page 9). 	
No sound, picture OK	 The sound may be muted. Press VOLUME. The station may have broadcast difficulties. Try another channel. The MTS feature may be in SAP mode. Press the MTS button on the remote control until STEREO (or MONO) mode is active. 	
Poor sound, picture OK	 The station may have broadcast difficulties. Try another channel. The MTS feature may be in SAP mode. Press the MTS button on the remote control until STEREO (or MONO) mode is active. 	
Poor picture, sound OK	 Check the antenna connections. The station may have broadcast difficulties. Try another channel. Adjust the PICTURE menu. This TV will not accept or display 480p or 720p progressive scan signals or 1080i interlaced high-definition signals through its ColorStream inputs. Switch the other device's output to 480i interlaced mode first (see page 9). 	
Poor reception of broadcast channels	 The station may have broadcast difficulties. Try another channel. Check the antenna connections. If you are using a VCR, make sure the TV/VCR button is set correctly. 	
Cannot receive above channel 13	Make sure the TV/CABLE feature in the SETUP menu is set to "CABLE."	
Unable to select a certain channel	 The channel may be blocked by the CH LOCK feature, or erased with the add/erase feature. 	
Cannot access signal input sources (Video1, Video2, Video3 and ColorStream) and/or Channels 3 and 4	Check the VIDEO LOCK feature.	
Multiple images	The station may have broadcast difficulties. Try another channel.Use a highly directional outdoor antenna.	
Poor color or no color	 The station may have broadcast difficulties. Try another channel. Adjust the TINT and/or COLOR in the PICTURE menu. If you change the direction of the TV while it is turned on, the picture could suffer from color shading. If so, turn off the TV and allow it to cool for several hours before turning it on again. 	
Black box on screen	Repeatedly press CAP/TEXT to turn off the Closed Caption Text mode.	
No stereo or SAP sound from a known MTS broadcast	Make sure the MTS feature is set properly.	
The PIN code does not work	Change or reset your PIN code (pages 18 and 19).	
The remote control does not operate	 Make sure the TV/VCR/DVD/CABLE mode is set properly on the remote control. Remove all obstructions between the remote control and the TV. The remote control batteries may be dead. Replace the batteries. 	





- This model complies with the specifications below.
- Design and specifications are subject to change without notice.
- This model may not be compatible with features and/or specifications that may be added in the future.

Picture Tube	676 mm (27 in.) diagonal (Screen size is approximate.)
Television system	NTSC standard
Channel coverage	VHF: 2–13
	UHF: 14–69
	Cable TV: 4A, A-5–A-1, A-I,
	J–W, W+1–W+84
Power source	120V AC, 60 Hz
Power consumption	135 W
Audio power	5 W + 5 W
Speaker type	45.7 mm x 99.1 mm (1-13/16 in. x 3-7/8 in.) x 2 pcs.
Video/Audio terminals	S-VIDEO INPUT
	Y-INPUT: 1V (p-p), 75 ohm, negative sync.
	C-INPUT: 0.286V (p-p) (burst signal), 75 ohm
	VIDEO/AUDIO INPUT
	VIDEO: 1V (p-p), 75 ohm, negative sync.
	AUDIO: 150 mV (rms) (30% modulation equivalent, 47k ohm)
	ColorStream® (component video) INPUT
	Y : 1V (p-p), 75 ohm
	PR : 0.7V (p-p), 75 ohm
	PB : 0.7V (p-p), 75 ohm
	VIDEO/AUDIO OUTPUT
	VIDEO: 1V (p-p), 75 ohm, negative sync.
	AUDIO: 150 mV (rms) (30% modulation equivalent, 47k ohm)
Dimensions	Width : 740 mm (29-1/8 in.)
	Height: 574.5 mm (22-5/8 in.)
	Depth : 495 mm (19-1/2 in.)
Weight	88.2 lbs. (40 kg)
Supplied accessories	Remote control with two size "AAA" batteries





Limited Canada Warranty for 27" and All Smaller Television Models

Toshiba of Canada Limited ("TCL") makes the following limited warranties to original consumers in Canada. THESE LIMITED WARRANTIES EXTEND TO THE ORIGINAL CONSUMER PURCHASER OR ANY PERSON RECEIVING THIS TELEVISION AS A GIFT FROM THE ORIGINAL CONSUMER PURCHASER AND TO NO OTHER PURCHASER OR TRANSFEREE.

PRODUCTS PURCHASED IN CANADA AND USED ANYWHERE OUTSIDE OF CANADA, INCLUDING, WITHOUT LIMITATION, THE U.S.A. AND MEXICO, ARE NOT COVERED BY THESE WARRANTIES. PRODUCTS PURCHASED ANYWHERE OUTSIDE OF CANADA, INCLUDING, WITHOUT LIMITATION, THE U.S.A. AND MEXICO, AND USED IN CANADA, ARE NOT COVERED BY THESE WARRANTIES.

Limited One (1) Year Warranty on Parts and Labour*

TCL warrants this television and its parts against defects in materials or workmanship for a period of one (1) year after the date of original retail purchase. DURING THIS PERIOD, TCL WILL, AT TCL'S OPTION, REPAIR OR REPLACE A DEFECTIVE PART WITH A NEW OR REFURBISHED PART WITHOUT CHARGE TO YOU FOR PARTS OR LABOUR. YOU MUST DELIVER THE ENTIRE TELEVISION TO AN AUTHORIZED TCL SERVICE DEPOT. YOU MUST PAY FOR ALL TRANSPORTATION AND INSURANCE CHARGES FOR THE TELEVISION TO AND FROM THE SERVICE DEPOT.

Limited Two (2) Year Warranty on Picture Tube*

TCL further warrants the picture tube in this television against defects in materials or workmanship for a period of two (2) years after the date of original retail purchase. DURING THIS PERIOD, TCL WILL, AT TCL'S OPTION, REPAIR OR REPLACE A DEFECTIVE PICTURE TUBE WITH A NEW OR REFURBISHED PICTURE TUBE WITHOUT CHARGE TO YOU, EXCEPT THAT, IF A DEFECTIVE PICTURE TUBE IS REPAIRED OR REPLACED AFTER ONE (1) YEAR FROM THE DATE OF THE ORIGINAL RETAIL PURCHASE, YOU MUST PAY ALL LABOUR CHARGES INVOLVED IN THE REPAIR OR REPLACEMENT. YOU MUST DELIVER THE ENTIRE TELEVISION TO AN AUTHORIZED TCL SERVICE DEPOT. YOU MUST PAY FOR ALL TRANSPORTATION AND INSURANCE CHARGES FOR THE TELEVISION TO AND FROM THE SERVICE DEPOT.

Rental Units

The warranty for rental units begins with the first rental or thirty (30) days from the date of shipment to the rental firm, whichever comes first.

*Limited Warranty for Commercial Units

TCL warrants televisions sold and used for commercial purposes as follows: all parts are warranted against defects in materials or workmanship for a period of ninety (90) days after the date of original purchase. DURING THIS PERIOD, TCL WILL, AT TCL'S OPTION, REPAIR OR REPLACE A DEFECTIVE PART WITH A NEW OR REFURBISHED PART WITHOUT CHARGE TO YOU FOR PARTS OR LABOUR. YOU MUST DELIVER THE ENTIRE TELEVISION TO AN AUTHORIZED TCL SERVICE DEPOT. YOU MUST PAY FOR ALL TRANSPORTATION AND INSURANCE CHARGES FOR THE TELEVISION TO AND FROM THE SERVICE DEPOT.

Owner's Manual and Product Registration

Read this owner's manual thoroughly before operating this television. Register your product online at **www.toshiba.ca** as soon as possible. By registering your product, you will enable TCL to bring you new products specifically designed to meet your needs and help us to contact you in the unlikely event a safety notification is required. Failure to register your product does not diminish your warranty rights.

Your Responsibility

THE ABOVE WARRANTIES ARE SUBJECT TO THE FOLLOWING CONDITIONS:

- (1) You must provide your bill of sale or other proof of purchase.
- (2) All warranty servicing of this television must be performed by an Authorized TCL Service Depot.
- (3) These warranties from TCL are effective only if the television is purchased in Canada from an authorized TCL dealer and operated in Canada.
- (4) Labour charges for installation, setup, adjustment of customer controls, and installation or repair of antenna systems are not covered by these warranties. Reception problems caused by inadequate antenna systems are your responsibility.
- (5) Warranties extend only to defects in materials or workmanship as limited above and do not extend to any television or parts that have been lost or discarded by you or to damage to television or parts caused by fires, misuse, accident, Acts of God (such as lightning or fluctuations in electric power), improper installation, improper maintenance, or use in violation of instructions furnished by TCL; or to units that have been modified or had the serial number removed, altered, defaced, or rendered illegible.

How to Obtain Warranty Services

If, after following all of the operating instructions in this manual and checking the "Troubleshooting" section, you find that service is needed:

- (1) To find the nearest TCL Authorized Service Depot, visit TCL's web site at **www.toshiba.ca**.
- (2) Present your bill of sale or other proof of purchase to the Authorized Service Depot. You must deliver the entire television to an Authorized TCL Service Depot. You must pay for all transportation and insurance charges for the television to and from the Service Depot.

For additional information, visit TCL's web site: www.toshiba.ca

ALL WARRANTIES IMPLIED BY THE LAW OF ANY PROVINCE OF CANADA, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED TO THE DURATION OF THE LIMITED WARRANTIES SET FORTH ABOVE. WITH THE EXCEPTION OF ANY WARRANTIES IMPLIED BY THE LAW OF ANY PROVINCE OF CANADA AS HEREBY LIMITED, THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, GUARANTEES, AGREEMENTS, AND SIMILAR OBLIGATIONS OF TCL WITH RESPECT TO THE REPAIR OR REPLACEMENT OF ANY PARTS. IN NO EVENT SHALL TCL BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, BUSINESS INTERRUPTION, OR MODIFICATION OR ERASURE OF RECORDED DATA CAUSED BY USE, MISUSE, OR INABILITY TO USE THIS PRODUCT).

No person, agent, distributor, dealer, or company is authorized to change, modify, or extend the terms of these warranties in any manner whatsoever. The time within which action must be commenced to enforce any obligation of TCL arising under this warranty or under any law of Canada or of any province thereof is hereby limited to 90 days from the date you discover, or should have discovered, the defect. This limitation does not apply to implied warranties arising under the law of any province of Canada.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH MAY VARY FROM PROVINCE TO PROVINCE IN CANADA. SOME PROVINCES OF CANADA DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, WHEN AN ACTION MAY BE BROUGHT, OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU UNDER SUCH CIRCUMSTANCES.







191 McNabb Street

Markham, Ontario L3R 8H2

TEL.: (905) 470-5400

Service Centers:

TORONTO: 191 McNABB STREET,

MARKHAM, ONTARIO, L3R 8H2, CANADA

TEL.: (905) 470-5400

MONTREAL: 18050 TRANS CANADA, KIRKLAND,

QUEBEC, H9J-4A1, CANADA

TEL.: (514) 390-7766

VANCOUVER: 22171 FRASERWOOD WAY,

RICHMOND, B.C., V62 1J5, CANADA

TEL.: (604) 303-2500

ColorStream®, FST Pure® and StableSound® are registered trademarks of Toshiba America Consumer Products, L.L.C. GameTimer is a trademark of Toshiba America Consumer Products, L.L.C.

PRINTED IN THAILAND

TOSHIBA



TOSHIBA

portantes mesur de sécurité

nez Toshib

ranchement d otre téléviseu

Utilisation de la télécommande

> stallation de votr téléviseur

Utilisation de fonctions

Annexe

Mode D'emploi

Téléviseur couleur

FSTPURE®

COLOR STREAM®

Mémo de l'utilisateur

La désignation du modèle et le numéro de série se trouvent à l'arrière de votre téléviseur.

Consignez ces numéros dans les espaces ci-dessous et communiquez-les à votre revendeur Toshiba chaque fois que vous le consultez au sujet de cet appareil.

Désignation du modèle :

Numéro de série :

27AF46C

© 2006 TOSHIBA CORPORATION All Rights Reserved



0/40/05 0 54 444

COVER 1

Cher client,

Merci d'avoir acheté ce téléviseur TOSHIBA. Ce manuel vous aidera à utiliser les possibilités nombreuses et variées de votre nouveau téléviseur. **Avant d'allumer votre téléviseur, veuillez lire ce manuel en entier.** Gardez-le à portée de la main pour pouvoir le consulter à l'avenir.

Consignes de sécurité

AVERTISSEMENT

POUR RÉDUIRE LE RISQUE D'INCENDIE OU DE CHOC ÉLECTRIQUE, N'EXPOSER CET APPAREIL NI À LA PLUIE NI À L'HUMIDITÉ.



AVERTISSEMENT RISQUE DE CHOC ÉLECTRIQUE NE PAS OUVRIR



AVERTISSEMENT: POUR RÉDUIRE LES RISQUES DE CHOC ÉLECTRIQUE, NE PAS RETIRER LE PANNEAU ARRIÈRE. LE TÉLÉVISEUR NE CONTIENT PAS DE PIÈCES RÉPARABLES PAR L'UTILISATEUR. S'ADRESSER À UN CENTRE DE SERVICE AGRÉÉ.



Le symbole de la foudre dans le triangle indique que la tension à l'intérieur du téléviseur peut être suffisamment élevée pour provoquer un choc électrique. NE PAS ESSAYER DE RÉPARER LE TÉLÉVISEUR SOI-MÊME.



Le point d'exclamation dans le triangle est un symbole qui précède des instructions de fonctionnement et d'entretien importantes.

ATTENTION: Pour réduire le risque de choc électrique, n'utilisez pas la fiche polarisée avec un cordon d'extension, un réceptacle ou toute autre prise électrique à moins que les lames puissent être insérées complètement pour éviter l'exposition des lames.

AVIS AUX INSTALLATEURS DE CÂBLODISTRIBUTION

Cet avis rappelle, à l'attention des installateurs de systèmes de câblodistribution, l'article 820-40 du NEC (code électrique national des États-Unis) qui fournit des conseils pour une mise à la terre correcte et qui préconise en particulier que la mise à la terre du câble doit être reliée au système de mise à la terre de l'immeuble, aussi près que possible du point où le câble entre dans l'immeuble. Pour de plus amples informations sur la mise à la terre de l'antenne, consulter les alinéas 25 et 26 à la page 4.

AVIS SUR LES EFFETS NÉFASTES POTENTIELS POUR LE TUBE ÉCRAN

Si une image fixe (immobile) reste à l'écran du téléviseur pendant des périodes prolongées, il est possible que cette image se grave définitivement sur le tube. **Ce genre de dommage N'EST PAS COUVERT PAR LA GARANTIE.** Consulter l'alinéa 33 à la page 4.

Sécurité des enfants

L'emplacement de votre téléviseur est important

Félicitations pour votre achat!
Tout en profitant de votre nouveau téléviseur, n'oubliez pas les conseils de sécurité suivants :

Le problème

- ☐ Si vous êtes comme la plupart des consommateurs, vous avez un téléviseur chez vous. Beaucoup de foyers en ont même plusieurs.
- ☐ L'expérience du cinéma maison se répand, et les gens achètent des téléviseurs de plus en plus grands; cependant, ceux-ci ne sont pas toujours posés sur des meubles adaptés.
- □ Parfois, les téléviseurs sont mal fixés ou mal placés sur une commode, une bibliothèque, une étagère, un bureau, un haut-parleur, un coffre ou un chariot. Le téléviseur risque donc de se renverser ou de tomber, causant ainsi des blessures qui auraient pu être évitées.

Toshiba s'en préoccupe!

☐ L'industrie électronique grand public s'engage à rendre le cinéma maison agréable et sécuritaire.

☐ Pour promouvoir la sécurité des enfants et informer les consommateurs et leurs familles sur la sécurité des téléviseurs, la Consumer Electronics Association a créé une commission sur la sécurité des appareils de cinéma maison réunissant les fabricants de téléviseurs et de meubles pour appareils électroniques.

La sécurité avant tout

☐ Tous les meubles ne conviennent pas dans tous les cas! Utilisez un meuble suffisamment grand pour soutenir le poids de votre téléviseur (et des autres appareils électroniques).

- ☐ Utilisez des équerres, brides et fixations pour ancrer le meuble au mur (mais ne vissez rien directement au téléviseur).
- ☐ Lisez attentivement et comprenez bien les autres instructions ci-jointes relatives à l'utilisation correcte de ce produit.
- □ Ne laissez pas les enfants grimper sur le meuble ou sur le téléviseur
- Évitez de placer sur votre téléviseur des articles (tels que magnétoscope, télécommande ou jouet) qu'un enfant curieux pourrait vouloir atteindre.
- N'oubliez pas que les enfants peuvent s'énerver en regardant la télévision et qu'ils pourraient renverser le téléviseur en le poussant ou en le tirant vers eux.
- Partagez avec votre famille et vos amis nos conseils de sécurité concernant la présence de ce danger caché dans votre maison. Merci!




2500 Wilson Blvd. Arlington, VA 22201 U.S.A. Tél. 703-907-7600 Téléc. 703-907-7690 www.CE.org

La CEA parraine, organise et gère le salon International CES®



Instructions importantes sur la sécurité

- 1) Lire ces instructions.
- 2) Conserver ces instructions.
- 3) Observer tous les avertissements.
- 4) Suivre toutes les instructions.





- 6) Nettoyer seulement avec un linge sec.
- 7) Ne pas bloquer les ouvertures d'aération. Installer selon les instructions du fabricant.



8) Ne pas installer près d'une source de chaleur telle qu'un radiateur, une bouche d'air chaud, une cuisinière ou tout autre appareil (y compris les amplificateurs) produisant de la chaleur.



9) Ne pas contourner le dispositif de sécurité que représente la fiche polarisée ou la fiche avec mise à la terre.

Une fiche polarisée possède une lame plus large que l'autre. Une fiche avec mise à la terre possède deux lames et une broche de mise à la terre. La lame large et la broche de mise à la terre sont prévues pour la sécurité de l'utilisateur. Si la fiche fournie ne va pas dans la prise, consulter un électricien qui la remplacera par une prise aux normes actuelles.



10) Protéger le cordon d'alimentation de façon à ce qu'il ne soit ni écrasé, ni coincé, surtout près des fiches, des blocs multiprises et du point de sortie de l'appareil.



- 11) N'utiliser que des accessoires spécifiés par le fabricant.
- 12) Utiliser le téléviseur uniquement avec le chariot le meuble, le trépied, le support ou la table, recommandés par le fabricant ou vendus avec l'appareil. En cas d'utilisation d'un chariot, faire bien attention en déplaçant l'ensemble chariot/appareil pour éviter des blessures dues au renversement.
- 13) Débrancher cet appareil pendant les orages électriques ou lorsqu'il n'est pas utilisé pendant une période prolongée.



14) Pour tout service après-vente, consulter un technicien de service agréé. Il faut faire réparer l'appareil lors de tout dommage, par exemple si le cordon d'alimentation ou la prise a été endommagé, si un objet ou un liquide a pénétré à l'intérieur de l'appareil, ou si l'appareil a été exposé à la pluie ou à l'humidité, s'il est tombé ou s'il fonctionne anormalement

ATTENTION: Pour réduire le risque de choc électrique, n'utilisez pas la fiche polarisée avec un cordon d'extension, un réceptacle ou toute autre prise électrique à moins que les lames puissent être insérées complètement pour éviter l'exposition des lames.

Installation, entretien et service après vente Installation

Suivre ces recommandations et précautions et observer tous les avertissements lors de l'installation du téléviseur :

16) Ne jamais modifier cet équipement. Tout changement ou toute modification peut annuler : a) la garantie, et b) le droit de l'utilisateur de se servir de cet appareil, selon les règles de la Commission fédérale des communications des États-Unis (FCC).

17) **DANGER: RISQUE DE BLESSURES GRAVES OU MORTELLES, OU D'ENDOMMAGEMENT**

DE L'APPAREL! Ne jamais placer le téléviseur sur un chariot, un meuble ou une table instable. Le téléviseur pourrait tomber et causer des blessures graves ou mortelles ou être gravement endommagé.



18) Ne jamais placer ni entreposer le téléviseur directement à la lumière du soleil ou dans un endroit chaud, humide, poussiéreux ou exposé à des vibrations importantes ou à des températures inférieures à 5 °C (41 °F).




19) Toujours placer le téléviseur par terre ou sur une surface solide, de niveau et stable, capable de soutenir le poids de l'appareil.



20) Ne jamais placer d'objets tels que des vases, des aquariums ou des bougies sur le téléviseur.



- 21) Ne jamais boucher ni couvrir les fentes ou orifices placés à l'arrière, dans la partie inférieure et sur les côtés du téléviseur. Ne jamais placer le téléviseur :
 - sur un lit, un sofa, un tapis ou toute autre surface semblable;
 - trop près des draperies, des rideaux ou des murs;
 - dans un espace clos tel qu'une bibliothèque, un meuble encastré ou tout autre endroit ne permettant pas une aération adéquate.





22) Le cordon d'alimentation doit être acheminé de façon à ne pas être écrasé ni coincé; ne jamais placer le téléviseur dans un endroit où le cordon d'alimentation risque d'être usé ou maltraité.

6/12/05, 9:55 AM


23) Ne pas surcharger les prises ni les rallonges.



24) Toujours faire fonctionner cet appareil à partir d'une source d'alimentation de 120 V CA, 60 Hz.



25) Toujours s'assurer que le circuit d'antenne est bien mis à la terre pour permettre une protection adéquate contre les surtensions et l'accumulation de charges électrostatiques (consulter la section 810 du Code électrique national des États-Unis).

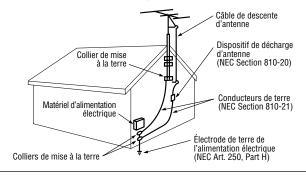

DANGER : RISQUE DE BLESSURE GRAVE OU MORTELLE!

• Faire preuve de prudence extrême afin de vous assurer que votre corps (où un objet tel qu'une échelle ou un tournevis avec lequel vous êtes en contact) ne risque pas de toucher une ligne électrique aérienne. Ne jamais placer l'antenne près d'une ligne aérienne ni de tout autre circuit électrique.

• Ne jamais essayer d'installer les dispositifs suivants pendant un orage électrique : a) un circuit d'antenne; ou b) des câbles, fils ou tout composant de cinéma maison branchés à une antenne ou à un circuit téléphonique.

Entretien

Pour vous assurer du bon fonctionnement et de l'utilisation sans danger de votre téléviseur TOSHIBA, veuillez suivre les recommandations et précautions suivantes :

- 27) Toujours s'asseoir à une distance d'environ 3 à 8 m (10 à 25 pi) et le plus en face possible du téléviseur. L'image peut sembler terne si l'on est assis trop à gauche ou trop à droite de l'appareil, ou bien si la lumière du soleil ou d'un éclairage intérieur se reflète sur l'écran. Éteindre le téléviseur pour voir s'il y a des reflets à l'écran, puis éliminer les sources de reflets en regardant le téléviseur.
- 28) Toujours débrancher le téléviseur avant de le nettoyer. Ne jamais utiliser de produits liquides ni d'aérosols de nettoyage.



29)

AVERTISSEMENT : RISQUE DE CHOC ÉLECTRIQUE! Ne jamais verser de liquides ni insérer d'objets dans les fentes du boîtier du téléviseur.

- 30) [Cet alinéa ne concerne que les téléviseurs à projection grand écran.] Si la température ambiante augmente soudainement (par exemple, lors de la livraison du téléviseur), de la buée pourrait apparaître sur les lentilles. Cela pourrait déformer l'image ou ternir les couleurs. Dans ce cas-là, éteindre le téléviseur pendant 6 à 7 heures pour permettre à la buée de s'évaporer.
- 31) Pour une meilleure protection du téléviseur contre les dommages causés par la foudre ou la surtension, toujours débrancher l'appareil de la prise électrique et déconnecter l'antenne en cas d'absence ou lorsque l'appareil n'est pas utilisé pendant des périodes prolongées.
- 32) Pendant une utilisation normale, le téléviseur peut parfois émettre des bruits secs. Cela est normal, surtout lorsqu'on allume ou on éteint le téléviseur. Si ces sons deviennent fréquents ou continus, débrancher le cordon d'alimentation et contacter un centre de service après-vente agréé Toshiba.
- 33) Effets néfastes potentiels pour le tube écran du téléviseur :
 Si une image fixe (immobile) reste à l'écran du téléviseur pendant des périodes prolongées, il est possible que cette image se grave définitivement sur le tube. Ce genre de dommage N'EST PAS COUVERT PAR LA GARANTIE. Ne jamais laisser le téléviseur allumé pendant de longues périodes de temps lorsqu'il affiche les formats ou images suivants :
 - Images fixes, telles que les fenêtres d'incrustation/surimpression d'image, les cours de la Bourse, les fenêtres de jeux vidéo, les logos de stations de télévision, les sous-titrages et les sites Web.
 - Formats spéciaux qui ne remplissent pas tout l'écran, par exemple l'affichage d'images en format panoramique (16:9) sur un écran normal (4:3) (bandes grises en haut et en bas de l'écran); ou l'affichage du format normal (4:3) sur un grand écran (16:9) (bandes grises à droite et à gauche de l'écran).

Service après-vente

AVERTISSEMENT : RISQUE DE CHOC ÉLECTRIQUE! Ne jamais tenter de réparer le téléviseur soi-même. Ouvrir et enlever les panneaux pourrait vous exposer à une tension dangereuse ou à d'autres dangers. Toujours consulter un centre de service après-vente agréé de Toshiba.

- 35) Si vous faites réparer le téléviseur :
 - Demander au technicien de n'utiliser que les pièces de rechange recommandées par le fabricant.
 - Après la réparation, demander au technicien d'effectuer les contrôles de sécurité ordinaires pour déterminer si le téléviseur fonctionne en toute sécurité.
- 36) Lorsque le téléviseur arrive à la fin de sa vie utile, demander à un technicien de le mettre au rebut convenablement. Une mise au rebut inappropriée du téléviseur pourrait entraîner l'implosion du tube cathodique et provoquer des blessures.

4

J3N12621A(F) P02-06 4 ↓ 6/12/05, 9:55 AM



Importantes mesures de sécurité	.2 -	4
Bienvenue chez Toshiba		
Exploration de votre nouveau téléviseur		
Choix d'un emplacement pour votre téléviseur		
Branchement de votre téléviseur		7
Branchement de votre magnétoscope		
Branchement d'un convertisseur pour le câble		
Branchement d'un lecteur de disque vidéo numérique (DVD)/récepteur satellite et d'un magnétoscope		
Branchement d'un lecteur de disque vidéo numérique (DVD) ColorStream® (vidéo à composante)		
et d'un magnétoscope		9
Branchement de deux magnétoscopes		
Branchement d'un caméscope		
Branchement d'un amplificateur audio		
Utilisation de la télécommande		
Préparation de la télécommande		
Preparation de la telecommande		
Utilisation de la télécommande avec un convertisseur pour le câble/récepteur satellite, magnétoscope ou lecture DVD		
Programmation de la télécommande utilisée avec un convertisseur pour le câble/récepteur satellite,		11
magnétoscope ou lecture DVD	4	12
Codes magnétoscope, lecteur DVD, et convertisseur pour le cable		
Apprendre à utiliser la télécommande		
• •		
Installation de votre téléviseur		
Choix de la langue d'affichage		
Mémorisation de nouveaux canaux		
Programmation automatique des canaux		
Ajout et suppression manuellement		
Modification des canaux		
Utilisation des fonctions		
Réglage des canaux		
Passage d'un canal à l'autre		
Programmation de vos canaux préférés		
Pour utiliser le menu BLOC.		
Pour sélectionner un code d'accès		
Pour bloquer les canaux		
Blocage Vidéo		
Réglage de GameTimer™ (Minuterie Jeux)	2	20
Attribution d'un nom aux différents canaux		
Réglage de l'horloge		
Pour régler l'heure de mise sous/hors tension		
Pour régler l'heure de mise sous tension		
Pour régler l'heure de mise hors tension		
Réglage de la qualité de l'image		
Spécifier le réglage ColorStream®		
Affichage des informations à l'écran		
Programmation de l'arrêt différé (SLEEP)		
Utilisation de la fonction sous-titrage		
Modification de la taille de l'image		
Réglage du son		
Coupure du son		
Sélection des émissions stéréo/SAP		
Réglage de la qualité du son		
Utilisation de la fonction BBE sound		
Utilisation de la fonction son ambiophonique		
Utilisation de la fonction StableSound®		
Mise en mode veille automatique		
Comprendre la fonction du mode mémoire		
Annexe		
Dépannage		
Spécifications		
Garantie limitée au Canada		
Garanto Illinio da Garada		, ,




Bravo! Vous venez d'acheter un des meilleurs téléviseurs couleurs du marché. L'objectif de ce manuel est de vous aider à installer et à utiliser votre téléviseur Toshiba aussi rapidement que possible.

En outre, il se peut que vous ayez besoin d'acheter d'autres câbles audio ou vidéo pour brancher votre équipement. Voir "Branchement de votre téléviseur" sur la page 7 pour plus d'informations.


Veuillez lire attentivement les instructions de sécurité et de fonctionnement avant de commencer.

Exploration de votre nouveau téléviseur

Vous pouvez faire fonctionner votre téléviseur en utilisant les touches sur le tableau de commande du téléviseur ou sur la télécommande. Les panneaux avant et arrière présentent toutes les sorties dont vous avez besoin pour raccordez d'autres équipements à votre téléviseur.

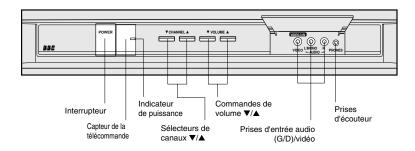


Panneau avant du téléviseur

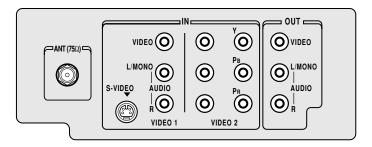

Panneau arrière du téléviseur

Choix d'un emplacement pour votre téléviseur


- Placez le téléviseur sur le sol ou sur une plate-forme solide où l'écran sera à l'abri d'un éclairage direct.
- Placez le téléviseur suffisamment loin des murs pour permettre une bonne ventilation. Une ventilation inappropriée peut provoquer une surchauffe, laquelle peut endommager le téléviseur.

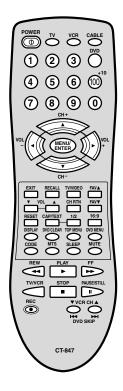




Branchement de votre téléviseur

- Un câble coaxial est le câble standard qui vient de votre antenne ou de votre convertisseur pour le câble. Les câbles coaxiaux utilisent des connecteurs "F".
- Les câbles A/V (audio/vidéo) standards ont généralement des codes de couleur qui correspondent à leur utilisation: jaune pour la vidéo et, rouge et blanc pour l'audio. Le câble audio rouge est utilisé pour le canal stéréo de droite, et le câble audio blanc pour le canal stéréo de gauche (ou mono). Si vous regardez le panneau arrière de votre téléviseur, vous verrez que les bornes ont des codes de couleur comme les câbles.
- Le câble S-vidéo fournit une meilleure qualité d'image que le câble vidéo standard. Les câbles S-vidéo ne peuvent être utilisés qu'avec des composants compatibles S-vidéo.
- Les câbles vidéo du composant sont rangés par trois et fournissent la meilleure qualité d'image. Les câbles vidéo du composant ne peuvent être utilisés qu'avec des composants compatibles vidéo du composant.

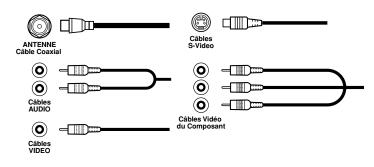

Branchement de votre magnétoscope

Ce branchement vous permet de regarder des canaux locaux et des programmes vidéo, de lire ou d'enregistrer sur votre magnétoscope tout en regardant la télévision, et d'enregistrer un canal tout en regardant une autre canal.

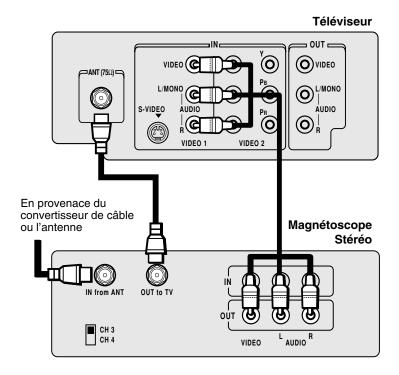

Vous aurez besoin de:

- deux câbles coaxiaux
- un ensemble de câbles A/V standards

REMARQUE: RISQUE

Ne branchez pas le cordon

d'alimentation avant que vous ayez fini de brancher tous les

D'ENDOMMAGER L'APPAREIL!

appareils.

Remarque:

Si vous utilisez un magnétoscope en mono, branchez L/Mono sur VCR Audio OUT en n'utilisant qu'un seul câble audio. Pour une meilleure qualité d'image, si votre magnétoscope possède un S-vidéo, vous pouvez utiliser un câble S-vidéo au lieu d'un câble vidéo standard. Ne pas raccorder un câble vidéo standard et un câble S-vidéo à VIDEO1 simultanément.

L'enregistrement, l'utilisation, la distribution ou la retouche non autorisée de programmes télévisés, de cassettes vidéos, de DVD et autres matériels est interdite par la loi sur les droits d'auteur aux Etats-Unis et dans les autres pays et vous impose des responsabilités civiles et pénales.

7

J3N12621A(F)_P07-16 7 6/12/05, 9:56 AM

-





Ce télécouleur a une gamme de syntonisation étendue et peut capter la plupart des canaux sans utiliser un convertisseur.

Certaines compagnies de câblodistribution permettent le visionnement de "canaux payants" dont le signal est brouillé. Pour regarder ces signaux, un débrouilleur, en général fourni par la compagnie, est nécessaire.

Pour les abonnés aux services de base de câblodistribution

Pour les services de base du câble sans convertisseur/débrouilleur, raccordez directement le câble coaxial 75 ohms de la câblodistribution à la prise d'antenne, à l'endos de l'appareil.

Pour les abonnés aux services de câblodistribution à canaux brouillés

Si vous souscrivez aux services de câblodistribution exigeant l'utilisation d'un convertisseur/débrouilleur, raccordez le câble coaxial d'entrée de 75 ohms au convertisseur/débrouilleur. Au moyen d'un autre câble coaxial de 75 ohms, raccordez la prise de sortie du convertisseur/débrouilleur à la prise d'antenne du téléviseur. Suivez les instructions ci-dessous. Réglez le télécouleur sur le canal de sortie du convertisseur/débrouilleur (en général 3 ou 4) et utilisez le convertisseur/débrouilleur pour choisir les canaux.


Pour les abonnés aux canaux câblodistribués non brouillés et aux canaux payants brouillés

Si vous êtes abonné à un service de câblodistribution offrant des canaux de base non brouillés et des canaux payants exigeant l'utilisation d'un convertisseur/débrouilleur, vous pouvez utiliser un séparateur de signal jumelé (parfois appelé coupleur jumelé) et une boîte de commutation A/B, qu'on peut se procurer chez l'installateur du câble ou dans tout magasin spécialisé. Suivez le schéma de raccordement ci-dessous. Quand le commutateur A/B est réglé à la position "B", il est possible de syntoniser tous les canaux non brouillés en utilisant le système de syntonisation du téléviseur. Quand il est réglé à la position "A", il est possible de syntoniser le téléviseur sur le canal de sortie du décodeur (en général 3 ou 4) et d'utiliser le convertisseur pour syntoniser les canaux brouillés.

Remarque:

Lorsque vous utilisez un convertisseur pour le câble avec votre téléviseur, il peut y avoir des fonctions que vous ne pouvez pas programmer en utilisant la télécommande, telles que l'attribution d'un nom à un canal, le verrouillage des canaux et la programmation de vos canaux préférés.

Câble du réseau de câblodistribution

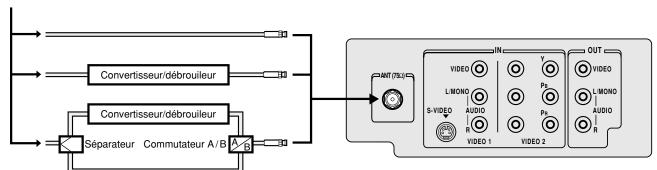




J3N12621A(F)_P07-16



Branchement d'un lecteur de disque vidéo numérique (DVD)/récepteur satellite et d'un magnétoscope


Ce branchement vous permet de regarder des programmes DVD/ satellite, vidéo, ou TV. Vous pouvez enregistrer à partir d'un récepteur satellite et de votre téléviseur, et enregistrer un canal tout en regardant un autre canal.

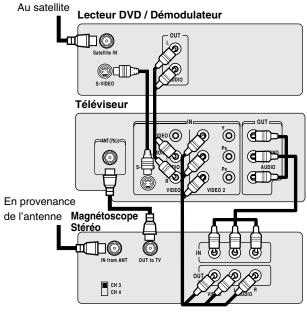

Branchement d'un lecteur de disque vidéo numérique (DVD) ColorStream® (vidéo à composante) et d'un magnétoscope

Ce branchement vous permet de regarder des programmes DVD, vidéo, ou TV et d'enregistrer des émissions de TV. Vous pouvez enregistrer un programme provenant d'une source et regarder un programme provenant d'une autre source. Votre téléviseur peut utiliser ColorStream (vidéo à composante). Le branchement de votre téléviseur sur un lecteur de disque vidéo numérique (DVD) compatible vidéo à composante, tel qu'un lecteur de disque vidéo numérique Toshiba avec ColorStream®, peut considérablement améliorer la qualité de l'image.

Lecteur DVD avec ColorStream®

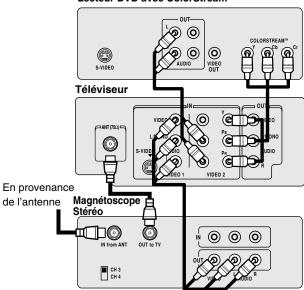

Vous aurez besoin de:

- · trois câbles coaxiaux
- deux ensembles de câbles A/V standards
- un câble S-vidéo
- une paire de câbles audio standards

Remarque:

Vous pouvez utiliser un câble vidéo standard au lieu d'un câble S-vidéo, mais la qualité de l'image sera moins bonne. Si vous utilisez un câble S-vidéo entre le téléviseur et le lecteur de disque vidéo numérique (DVD)/démodulateur, n'effectuez que les raccordements audio et débranchez le câble vidéo standard.

Vous aurez besoin de:

- · deux câbles coaxiaux
- un jeu de câbles A/V standards
- un jeu de câbles vidéo à composante
 une paire de câbles audio standards

Remarque:

Les prises ColorStream de ce téléviseur peuvent être utilisées SEULEMENT avec les appareils ayant une vitesse de balayage entrelacé 480i. Ce téléviseur ne recevra pas ou n'affichera pas des signaux de vitesse de balayage progressif 480p ou 720p ou des signaux d'haute définition entrelacé 1080i. Si vous raccordez un récepteur/décodeur d'haute définition, un lecteur DVD avec une vitesse de balayage progressif 480p ou un autre appareil semblable aux prises ColorStream du téléviseur, VOUS DEVEZ D'ABORD COMMUTER L'APPAREIL AU MODE ENTRELACÉ 480i. Le mangue de faire ceci causera une image faible d'être affichée ou l'image n'affichera pas.

L'enregistrement, l'utilisation, la distribution ou la retouche non autorisée de programmes télévisés, de cassettes vidéos, de DVD et autres matériels est interdite par la loi sur les droits d'auteur aux Etats-Unis et dans les autres pays et vous impose des responsabilités civiles et pénales.


9

J3N12621A(F)_P07-16 9 6/12/05, 9:56 AM





Ce branchement vous permet d'enregistrer (montage) un programme provenant d'un magnétoscope sur un autre magnétoscope tout en regardant un programme vidéo. Vous pourrez également enregistrer une émission de TV tout en regardant un autre canal.

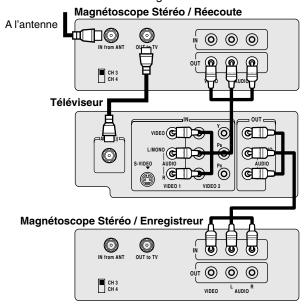

Vous aurez besoin de:


- · deux câbles coaxiaux
- deux ensembles de câbles A/V standards

Remarque:

Ne connectez pas le magnétoscope aux prises d'entrée et de sortie de la TV en même temps. Pour une meilleure qualité d'image, si votre magnétoscope possède un S-vidéo, vous pouvez utiliser un câble S-vidéo au lieu d'un câble vidéo standard. Ne pas raccorder un câble vidéo standard et un câble S-vidéo à VIDEO1 simultanément.

Branchement d'un caméscope

Ce branchement vous permet de regarder des enregistrements vidéo réalisés sur un caméscope.

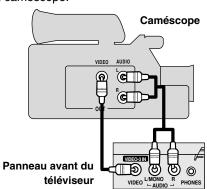

Vous aurez besoin de:

• un ensemble de câbles A/V standards

Remarque:

Pour une meilleure qualité d'image, si votre caméscope possède un S-vidéo, vous pouvez raccorder un câble S-vidéo (et des câbles audio standard) à VIDEO1 au dos du téléviseur. Ne pas raccorder un câble vidéo standard et un câble S-vidéo à VIDEO1 simultanément.

Branchement d'un amplificateur audio

Ce branchement vous permet d'utiliser un amplificateur audio et de profiter de sa grande qualité de son. Cela vous permet également d'utiliser des haut-parleurs externes. Pour régler le niveau audio, allumez le téléviseur et l'amplificateur stéréo. Vous aurez besoin d'une paire de câbles audio.

Au câble, convertisseur de câble ou à l'antenne

Vous aurez besoin de:

- un câble coaxial
- une paire de câbles audio


L'enregistrement, l'utilisation, la distribution ou la retouche non autorisée de programmes télévisés, de cassettes vidéos, de DVD et autres matériels est interdite par la loi sur les droits d'auteur aux Etats-Unis et dans les autres pays et vous impose des responsabilités civiles et pénales.

Utilisation de la télécommande Préparation de la télécommande


Avec cette télécommande, vous pouvez utiliser votre téléviseur avec la plupart des magnétoscopes et des lecteurs DVD, et des convertisseurs de câblodistribution même s'ils sont de marques différentes. Si vous utilisez votre téléviseur avec un magnétoscope ou un lecteur DVD Toshiba, votre télécommande est déjà programmée et est prête à l'emploi. Si votre magnétoscope, votre lecteur DVD et/ou votre convertisseur sont de marques différentes, vous devez programmer votre télécommande. (Voir "Programmer la télécommande de manière à actionner vos autres appareils" à la page 12.)

Placement des piles dans la télécommande Pour placer les piles:

1. Ouvrez le couvercle du compartiment à piles de la télécommande.



2. Placez deux piles de type "AAA" dans le compartiment. Respectez les polarités + et -.



 Refermez le couvercle du compartiment à piles de la télécommande jusqu'à ce qu'il se verrouille.

Remarque:

La télécommande de la TV peut commander ou non votre magnétoscope, votre lecteur DVD ou le convertisseur de câblodistribution. Reportez-vous au manuel d'utilisation fourni avec l'appareil pour voir quelles fonctions sont disponibles. En outre, les télécommandes fournies avec le magnétoscope, le lecteur DVD et/ou le convertisseur de câblodistribution peuvent avoir des fonctions qui ne sont pas disponibles sur cette télécommande. Si vous souhaitez continuer à utiliser ces fonctions, vous pouvez utiliser la télécommande fournie avec le magnétoscope, le lecteur DVD et/ou le convertisseur de câblodistribution.

Attention:

· Ne jamais jetez les piles dans un feu.

Remarques:

- Assurez-vous d'utiliser des piles de format AAA.
- Débarrassez-vous des piles dans un site désigné à cette fin.
- Éliminez toujours les piles usées en respectant les aspects environnementaux. Toujours suivre les réglementations appropriées en vigueur dans la région.
- Si la télécommande ne fonctionne pas adéquatement ou si la plage de fonctionnement devient réduite, remplacez les piles par des neuves.
- Lorsqu'il est nécessaire de remplacer les piles dans la télécommande, toujours remplacer les deux piles.
 Ne mélangez pas les différents types de piles ou combinez les piles utilisées avec les neuves.
- Si les piles sont vides ou si vous n'employez pas la télécommande pendant une période prolongée, retirez les piles. Ceci empêchera l'acide de pile de fuir sur le compartiment à piles.

Utiliser la télécommande pour actionner vos autres appareils


Pour commander un magnétoscope:

Programmez la
télécommande pour
reconnaître la marque
de votre magnétoscope
(voir "Programmer la
télécommande de
manière à actionner vos
autres appareils" à la
page12.) Les touches
illustrées à droite
permettent de commander le
magnétoscope.
Appuyez d'abord sur la
touche VCR.

Channel +/CH RTN

CH RTN


Fast Forward
Rewind
TV///CR

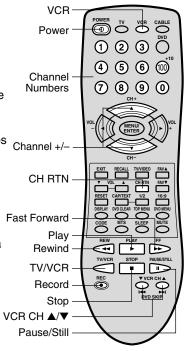

Pour commander un lecteur DVD:

Programmez la télécommande pour reconnaître la marque de votre lecteur DVD (voir "Programmer la télécommande de manière à actionner vos autres appareils" à la page12). Les touches illustrées à droite permettent de commander le lecteur DVD.

Appuyez d'abord sur la touche DVD.

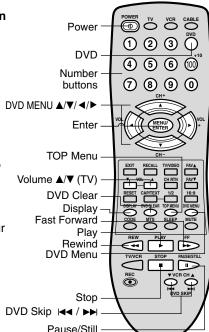

11

J3N12621A(F)_P07-16 11 6/12/05, 9:56 AM




Programmer la télécommande de manière à actionner vos autres appareils

Cette télécommande est pré-programmée pour commander les magnétoscopes et les lecteurs DVD Toshiba. Pour commander des magnétoscopes, des lecteurs DVD ou des convertisseurs de câblodistribution d'une autre marque que Toshiba, vous devez suivre la procédure indiquée ci-après pour programmer votre télécommande.

- Tout en maintenant la touche CODE enfoncée, appuyez sur la touche de l'appareil que vous souhaitez commander (magnétoscope, DVD ou CABLE).
- Entrez le code à deux chiffres de la liste sur la page 13 en utilisant les touches de sélection directe de canal (0 à 9) en moins de 10 secondes
- 3. Pointez la télécommande sur le magnétoscope, le lecteur DVD, ou le convertisseur et appuyez sur POWER pour tester le code. Si le magnétoscope, le lecteur DVD, ou le convertisseur se met en marche, cela signifie que vous avez entré le bon code. Si le magnétoscope, le lecteur DVD, ou le convertisseur ne répond pas à la télécommande, vous avez dû entrer le mauvais code. Répétez les étapes 1 à 2 avec un autre numéro de code.

Pour une utilisation future, inscrivez les codes que vous avez utilis	ŝé
Code magnétoscope	
Code lecteur DVD	

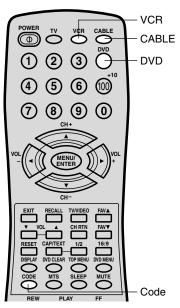

Remarques:

- À l'expédition de l'usine, la télécommande est réglée pour commander votre téléviseur.
- Si vous n'entrez pas le code en moins de 10 secondes après l'étape 1 ou si vous entrez un numéro n'apparaissant pas dans la liste sur la page 13, cette opération est annulée.
- Chaque fois que vous remplacez les piles, vous devez reprogrammer la télécommande.
- Certains magnétoscopes récents peuvent fonctionner avec l'un ou l'autre des deux codes. Ces magnétoscopes ont un commutateur qui possède le label "VCR1/VCR2." Si votre magnétoscope possède ce type de commutateur, il se peut qu'il ne réponde à aucun des numéros de code indiqués pour la marque de votre magnétoscope. Dans ce cas, placez le commutateur sur l'autre position (VCR1 ou VCR2) et reprogrammez la télécommande.



Code convertisseur pour le cable

Codes magnétoscope, lecteur DVD, et convertisseur pour le cable

VCR			
Admiral	08, 61	Multi Tech	39
Adventura	31	NEC	02, 18
Aiwa	31	Orion	33, 50
Akai	23, 38, 41	Panasonic	14, 51, 59
Audio Dynamics	02, 18	Pentax	15
Bell & Howell	06, 47	Philco	07, 14
Broksonic	21, 26, 33, 50, 55	Philips	07, 14, 27
Canon	14	Pioneer	10, 15
Citizen	09	Portland	46
Craig	12	Pro Scan	16, 60
Curtis Mathes	14, 59	Quasar	14, 59
Daewoo	44, 46, 48, 54	RCA	15, 16, 20, 27, 40, 42, 60
Daytron	36, 46	Realistic	06, 08, 12, 14, 31
DBX	02, 18	Samsung	20, 30
Emerson	03, 21 23, 26, 33, 35, 43, 50	Sansui	39
Fisher	11, 12, 13, 47	Sanyo	06, 12, 47
Funai	31	Scott	04, 05, 33, 43
General Electric	14, 16, 20	Sears	06, 09, 11, 12, 15
Goldstar	09	Sharp	08, 61
Go Video	56, 62, 63	Shintom	39
Hitachi	15, 57	Signature 2000	08, 14, 16, 19, 31, 49
Instant Replay	14, 27	Sony	17, 32, 37
J.C. Penney	14, 15, 18, 27	Sylvania	07, 14, 27
JVC	02, 25, 58	Symphonic	31
Kenwood	02	Tashiko	09
Logik	39	Tatung	02
LXI	09, 31	Teac	02, 31
Magnavox	07, 14, 31	Teknika	34
Marantz	07, 18	Toshiba	05, 15
Marta	09	XR1000	39
Memorex	06, 12, 14, 31, 33	Vector Research	04, 18
Mitsubishi	04, 22, 52, 64	Yamaha	02, 18
Montgomery Ward	08, 14, 16, 19, 31, 49	Zenith	01, 24, 25, 29, 37

LECTEUR DVD)		
Aiwa	23	RCA	01,06
Apex	20	Saba	01
Denon	00, 17	Sampo	14
Ferguson	01	Samsung	10
Hitachi	11	Sharp	08
JVC	09	Silvania	32, 18
Kenwood	15, 29	SMC	25
Konka	19	Sony	04, 26, 27, 28
Mitsubishi	05	Technics	00
Nordmende	01	Thomson	01
Onkyo	21	Toshiba	03
Oritron	24	Wave	22
Panasonic	00	Yamaha	00, 30
Philips	03, 16	Zenith	07, 12
Pioneer	02	Vialta	31
Raite	13	Funai	32, 18

CONVERTISSEUR POUR CABLE			
Allegro	58, 62	RCA DSS	73
Allegro A/B Switch	61	Regency	29
Gemini	05, 31, 38	Samsung	35
General Electric	67	Scientic Atlanta	16, 23, 36, 64
General Instrument	05, 06	Sprucer	13
Hamlin	02, 03, 45, 65, 66	Standard Comp	35
Jerrold	04, 07, 08, 09, 10, 18, 60, 63	Texscan	39, 56, 71
Kale Vision	35	Tocom	17, 18, 46
Macom	14, 21	Unika	48, 62
Magnavox	34	United Satellite	44
NSC	35, 39, 68, 69, 70	Universal	58, 62
Oak	11, 32, 42	Vid Tech	40
Panasonic	13, 20	Video Way	49
Paragon	33	Viewstar	54, 55, 72
Philips	47, 50, 52, 54, 55	Zenith	01, 53, 74
Pioneer	15, 43	Zenith Satellite	12, 28, 30, 51



POWER allume et éteint le téléviseur

SLEEP programme la TV pour qu'elle s'éteigne à l'heure définie (page 25)

TV/VIDEO choisit la source d'entrée vidéo (page 24)

CH + / – passe aux canaux programmés (page 16)

TV/VCR/CABLE/DVD passe au mode Télévision, Magnétoscope, Lecteur DVD, ou CABLE (page 11)

CHANNEL NUMBERS choisit un canal directement (page 16)

VOLUME + / - règle le volume

CH RTN (Channel Return) retourne au canal précédent (page 17)

MENU/ENTER permet accès aux menus de programmation, et enregistre les informations programmées (page 15)

FAV ▲/ ▼ (Favorite Channels) passe aux canaux préférés (page 17)

RESET retourne aux réglages pré-réglés à l'usine (pages 24 et 27)

CAP/TEXT affiche et cache les sous-titres ou le texte (page 25)

1/2 sélectionne les sous-titres/texte des canaux 1 et 2 (page 25)

MUTE coupe le son (page 26)

MTS permet de passer en son STEREO, SAP, et MONO (page 26)

RECALL affiche les informations d'état à l'écran (page 24)

CODE est utilisé pour la programmation de la télécommande (page 12)

EXIT sort de la programmation des menus (page 15)

16:9 permet de faire basculer le rapport hauteur/largeur entre les modes 4:3 letterbox (boîte à lettre) et 16:9 (grand écran) (page 25)

STOP arrêt d'une vidéocassette/DVD

REC enregistrement d'une vidéocassette

PLAY lecture d'une vidéocassette/DVD

FF fait avancer une vidéocassette/DVD

REW réembobine une vidéocassette/DVD

PAUSE/STILL arrête momentanément la bande magnétoscopique/DVD

TV/VCR alterne entre le télévieur et le magnétoscope pendant un enregistrement

VCR CHANNEL ▲ and ▼ passe aux canaux programmées du magnétoscope.

DVD SKIP ◄ ► saute un chapitre du DVD


DISPLAY affiche les informations d'état à l'écran dans le mode DVD

VOLUME ▲/▼ (DVD) règle le volume du DVD

DVD CLEAR efface les données d'entrée du mode de réglage du DVD

TOP MENU accède au menu TOP du DVD

DVD MENU accède au menu DVD

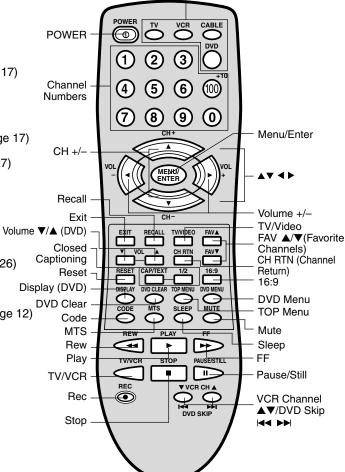

TV/VCR/CABLE/DVD

Installation de votre téléviseur

Après avoir placé les piles et programmé la télécommande, il faut effectuer certains pré-réglages préférentiels sur votre téléviseur en utilisant le menu. Vous pouvez accéder au menu avec les touches de la télécommande.


- Lorsque vous sélectionnez une fonction dans le menu, les modifications s'effectuent immédiatement. Vous n'avez pas besoin d'appuyer sur MENU ou EXIT pour voir ces modifications.
- Après 15 secondes, le menu se ferme automatiquement à l'écran si vous ne sélectionnez pas quelque chose. Les modifications seront toujours sauvegardées.
- Lorsque vous avez terminé la programmation des menus, appuyez sur EXIT.

Choix de la langue d'affichage


Vous pouvez choisir parmi les trois langues suivantes (Anglais, Français et Espagnol) pour l'affichage à l'écran. Les menus et les messages de réglage apparaîtront dans la langue de votre choix.

Pour sélectionner une langue:


 Appuyez sur MENU, puis appuyez sur ◀ ou ▶ jusqu'à ce que le menu OPTION apparaisse.

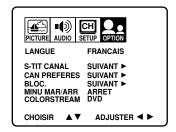

2. Appuyez sur ▲ ou ▼ pour mettre en surbrillance LANGUE.

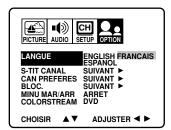

3. Appuyez sur ◀ ou ▶ pour mettre en surbrillance la langue souhaitée.

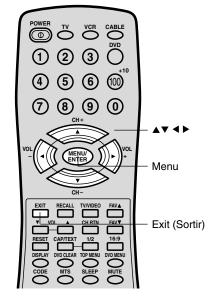

15

J3N12621A(F)_P07-16



Lorsque vous appuyez sur CH +/- sur la télécommande ou CHANNEL ▼/▲ sur le panneau avant du téléviseur, votre téléviseur s'arrêtera uniquement sur les canaux stockés dans la mémoire du téléviseur. Suivez les étapes suivantes pour programmer les canaux dans la mémoire

Programmation automatique des canaux


Votre téléviseur peut détecter automatiquement tous les canaux actifs et les stocker dans sa mémoire. Une fois que le téléviseur a mémorisé automatiquement les canaux, vous pouvez supprimer ou ajouter manuellement.

Pour ajouter des canaux automatiquement:

- Appuyez sur MENU, puis sur ◀ ou ▶ pour mettre en surbrillance le menu SETUP.
- Appuyez sur ▲ ou ▼ jusqu'à ce que la sélection TV/CABLE soit mise en surbrillance.
- Appuyez sur

 ou

 pour mettre en
 surbrillance soit TV, soit CABLE,
 selon ce que vous souhaitez utiliser.
 Si vous utilisez une antenne,
 choisissez TV. Si vous recevez
 les canaux câblés, choisissez
 CABLE.

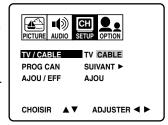


- Appuyez sur ▼ pour sélectionner PROG CAN.
- 5. Appuyez sur ◀ ou ▶ pour commencer à programmer les canaux. Le téléviseur passera automatiquement par tous les canaux TV ou CABLE (selon ce que vous avez sélectionné), et mémorisera tous les canaux actifs. Alors que le téléviseur passe par tous les canaux, le message "EN PROGRAMME S.V.P. ATTENDRE" apparaît.
- Lorsque la programmation des canaux est terminée, le message "TERMINE" apparaît.
- 7. Appuyez sur CH + ou pour visualiser les canaux programmés.

Ajout et suppression manuellement

Après avoir programmé automatiquement les canaux, vous pouvez ajouter ou supprimer manuellement des canaux spécifiques.

Pour ajouter ou supprimer manuellement des canaux:

- Sélectionnez le canal que vous voulez ajouter ou supprimer.
 Si vous ajoutez le canal, vous devez sélectionner le canal en utilisant les touches Channel Number (numéros des canaux).
- Appuyez sur MENU, puis sur ◀ ou ▶ pour mettre en surbrillance le menu SETUP.
- Appuyez sur ▼ ou ▲ pour mettre en surbrillance AJOU/EFF.
- Appuyez sur ◀ ou ▶ pour sélectionner AJOU ou EFF, quelle que soit la fonction que vous souhaitez utiliser.



5. Répétez les étapes 1 à 4 pour les autres canaux que vous souhaitez ajouter ou supprimer.


Modification des canaux

Pour passer au canal programmé suivant:

Appuyez sur CHANNEL ▼/▲ sur le panneau avant du téléviseur ou CH +/- sur la télécommande.

Pour passer à un canal spécifique (programmé ou non programmé): Appuyez sur les touches numériques (0 à 9 et 100) sur la télécommande.

Par exemple, pour sélectionner le canal 125, appuyez sur 100, 2, 5.

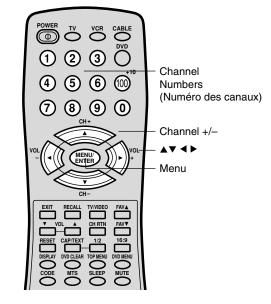



Utilisation des fonctions

Réglage des canaux

Passage d'un canal à l'autre

Vous pouvez passer d'un canal à l'autre sans avoir à entrer un numéro de canal à chaque fois.

Pour passer d'un canal à l'autre:

- 1. Sélectionnez le premier canal que vous souhaitez visualiser.
- Sélectionnez un deuxième canal à l'aide des touches numériques (0 à 9, 100).
- Appuyez sur CH RTN (retour au canal précédent). Le canal précédent s'affichera.


Chaque fois que vous appuyez sur CH RTN, le téléviseur fera la navette entre les deux canaux.

Programmation de vos canaux préférés


Vous pouvez pré-régler jusqu'à 12 de vos canaux préférés en utilisant la fonction de programmation des canaux préférés. Etant donné que cette fonction ne parcoure que vos canaux préférés, cela vous permet de sauter les autres canaux que vous ne regardez pas habituellement. Vous pouvez toujours utiliser le +/- pour parcourir tous les canaux que vous avez programmés dans la mémoire de votre téléviseur.

Pour programmer vos canaux préférés:

- 1. Sélectionnez le canal que vous souhaitez programmer comme un canal préféré.
- 2. Appuyez sur MENU, puis sur ◀ ou ▶ pour mettre en surbrillance le menu OPTION.
- 3. Appuyez sur ▲ ou ▼ pour mettre en surbrillance CAN PREFERES.

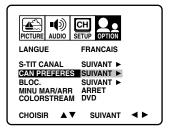

 Appuyez sur ◀ ou ▶ pour afficher le menu CAN PREFERES. REGLAGE/EFFACE sera mis en surbrillance.

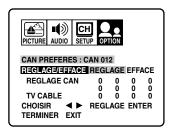



- Appuyez sur ◀ ou ▶ pour mettre en surbrillance REGLAGE et appuyez sur ENTER.
- 6. Appuyez sur EXIT pour effacer l'écran.
- 7. Répétez les étapes 1 à 6 pour obtenir jusqu'à 12 canaux.

Pour sélectionner vos canaux préférés:

Appuyez sur les touches FAV (canal préféré) ▲▼ sur la télécommande pour sélectionner vos canaux préférés.

Les touches FAV $\blacktriangle \blacktriangledown$ ne fonctionneront pas tant que vous n'aurez pas programmé vos canaux préférés.

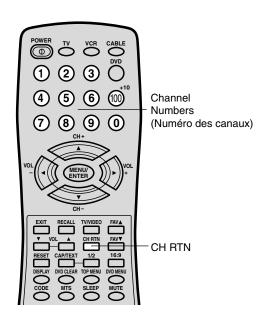

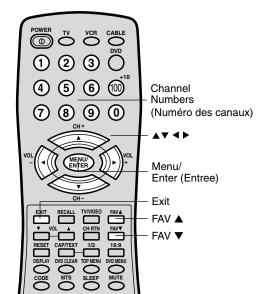

17


J3N12621A(F)_P17-26

17


6/12/05, 9:57 AM



- 1. Sélectionnez un canal que vous souhaitez supprimer.
- Appuyez sur MENU, puis sur ◀ ou ▶ pour mettre en surbrillance le menu OPTION.
- 3. Appuyez sur ▲ ou ▼ pour mettre en surbrillance CAN PREFERES.
- Appuyez sur ◀ ou ▶ pour afficher le menu CAN PREFERES. REGLAGE/EFFACE sera mis en surbrillance.

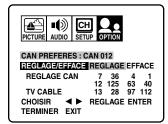

5. Appuyez sur ◀ ou ▶ pour mettre en surbrillance EFFACE.

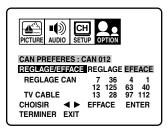

- 6. Appuyez sur ENTER jusqu'à ce que "0" remplace le numéro du canal que vous souhaitez supprimer.
- 7. Appuyez sur EXIT pour effacer l'écran.
- 8. Répétez les étapes 1 à 6 pour les autres canaux.

Pour utiliser le menu BLOC.


Le menu BLOC. comprend les fonctions suivantes : BLOCAGE CANAL, BLOCAGE VIDEO, GameTimer (MINUTERIE JEUX) et NOUVEAU CIP.

Pour sélectionner un code d'accès


Vous pouvez utiliser les fonctions après avoir entré le code d'accès correct.


Pour sélectionner votre code d'accès et accéder aux menus BLOC.:


- 1. Appuyez sur MENU puis sur ◀ ou ▶ pour mettre le menu OPTION en surbrillance.
- 2. Appuyez sur ▲ ou ▼ pour mettre en surbrillance BLOC..

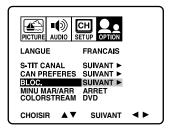


3. Appuyez su ◀ ou ▶ pour afficher le menu BLOCAGE.

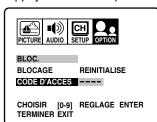

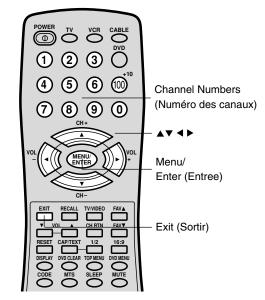

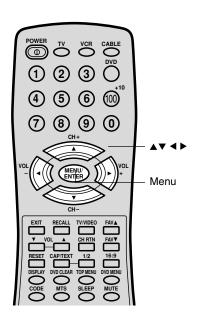

4. Utilisez les touches numériques (numéros des canaux) (0 à 9) pour saisir votre code d'accès. Si vous accédez aux menus BLOC. pour la première fois, sélectionnez un nombre à 4 chiffres qui sera votre code d'accès. Appuyez sur ENTER. Le menu BLOC. apparaît.

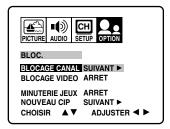

5. Vous pouvez maintenant procéder à un blocage. Veuillez vous reporter à la section "Pour bloquer les cannaux" (au-dessous), "Pour changer votre code d'accès" (au-dessous), "Blocage Video" (page 20), ou "Réglage de GameTimer™ (Minuterie Jeux)" (page 20).

Pour changer votre code d'accès:

- Appuyez sur MENU puis su

 ou


 pour afficher OPTION menu.
- 2. Appuyez sur ▲ ou ▼ pour mettre en surbrillance BLOC..
- 3. Appuyez sur ◀ ou ▶ pour afficher le menu BLOCAGE.
- 4. Utilisez les touches numériques (0 à 9) pour saisir votre code d'accès. Appuyez sur ENTER. Le menu BLOC. apparaît.
- 5. Appuyez sur ▲ ou ▼ pour mettre en surbrillance NOUVEAU CIP et appuyez sur ◀ ou ▶ pour afficher le menu NOUVEAU CIP.
- 6. Utilisez les touches numériques (0 à 9) pour saisir un nouveau code. Appuyez sur ENTER.
- 7. Appuyez sur EXIT pour retourner à un écran normal.


Pour bloquer les canaux

Avec la fonction BLOCAGE CANAL, vous pouvez bloquer des canaux spécifiques. Vous ne pourrez pas capter les canaux bloqués à moins que vous effaciez les réglages. Vous pouvez décider de bloquer jusqu'à neuf canaux télévisés et neuf canaux du câble.

Pour bloquer des canaux:


- Utilisez les touches numériques (0 à 9, 100) pour afficher les canaux télévisés que vous souhaitez bloquer.
- 2. Appuyez sur MENU puis sur ◀ ou ▶ pour afficher le menu OPTION.
- 3. Appuyez sur ▲ ou ▼ pour mettre en surbrillance BLOC...
- 4. Appuyez sur ◀ ou ▶ pour afficher le menu BLOCAGE.
- Utilisez les touches numériques (0 à 9) pour saisir votre code d'accès puis appuyez sur ENTER. Le menu BLOC. apparaît.
- 6. Appuyez sur ▲ ou ▼ pour mettre en surbrillance BLOCAGE CANAL puis appuyez sur ◀ ou ▶ pour afficher le menu BLOCAGE CANAL.
- 7. Appuyez sur ◀ ou ▶ pour choisir une des options suivantes:
 - REGLAGE pour régler le canal qui doit être bloqué. Ensuite appuyez sur ENTER.
 - EFFACE pour effacer tous les canaux de la liste des canaux bloqués. Ensuite appuyez sur ENTER.
- Répétez les étapes 1~7 pour bloquer d'autres canaux. Lorsque vous avez fini de bloquer des canaux, appuyez sur EXIT pour retourner à un écran normal.
 - Si vous essayez de regarder un canal bloqué, la télévision ne le montrera pas mais montrera le canal le plus proche qui n'a pas été bloqué.






Remarque:

Si vous avez oublié votre code d'accès, appuyez sur RECALL quatre fois en cinq secondes à partir du menu BLOCAGE. Le code d'accès est validé (le statut BLOCAGE REINITIALISE est réactivé).

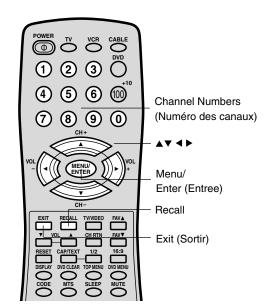

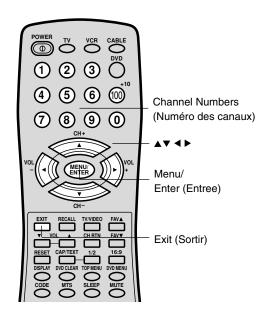

Remarque:

Après avoir programmé le BLOCAGE CANAL, changez les canaux avant d'éteindre la télévision.





- 1. Appuyez sur MENU puis sur ◀ ou ▶ pour afficher le menu OPTION.
- 2. Appuyez sur ▲ ou ▼ pour mettre en surbrillance BLOC. puis appuyez sur ◀ ou ▶ pour afficher le menu BLOCAGE.
- 3. Utilisez les touches numériques (0-9) pour saisir votre code d'accès puis appuyez sur ENTER. Le menu BLOC. apparaît.
- 4. Appuyez sur ▲ ou ▼ pour mettre en surbrillance BLOCAGE CANAL puis appuyez sur ◀ ou ▶ pour afficher le menu BLOCAGE
- 5. Appuyez sur ◀ ou ▶ pour mettre en surbrillance EFFACE et effacer tous les canaux de la liste des canaux bloqués. Appuyez sur ENTER.
- 6. Appuyez sur EXIT pour retourner à un écran normal.

Blocage Vidéo

Avec la fonction BLOCAGE VIDEO, vous pouvez bloquer les sources d'entrées (VIDEO1, VIDEO2, VIDEO3, COLORSTREAM) et les canaux 3 et 4. Vous ne pourrez pas sélectionner les sources d'entrées avec la touche TV/VIDEO ou les touches Channel à moins que vous effaciez les réglages.

Pour régler le blocage vidéo:


- 1. Appuyez sur MENU puis sur ◀ ou ▶ pour afficher le menu OPTION.
- 2. Appuyez sur ▲ ou ▼ pour mettre en surbrillance BLOC..
- 3. Appuyez sur ◀ ou ▶ pour afficher le menu BLOCAGE.
- 4. Utilisez les touches numériques (0-9) pour saisir votre code d'accès puis appuyez sur ENTER. Le menu BLOC. apparaît.
- 5. Appuyez sur▲ ou ▼ pour mettre en surbrillance BLOCAGE VIDEO.
- 6. Appuyez sur ◀ ou ▶ pour sélectionner:
 - ARRET : Permet de débloquer toutes les sources d'entrées vidéo.
 - VIDEO: Permet de bloquer VIDEO1, VIDEO2, VIDEO3 et COLORSTREAM.
 - CHOISIR ▲▼ VIDEO + : Permet de bloquer VIDEO1, VIDEO2, VIDEO3, COLORSTREAM, les canaux 3 et 4. Cette option doit être utilisée si vous utilisez l'antenne pour lire une cassette vidéo.
- 7. Appuyez sur EXIT pour retourner à un écran normal.

Réglage de GameTimer™ (Minuterie Jeux)

Avec la fonction MINUTERIE JEUX, vous pouvez activer automatiquement la fonction BLOCAGE VIDEO (réglage VIDEO) pour fixer une limite de temps pour montrer les jeux TV (30, 60, 90 ou 120 minutes).

Pour régler GameTimer:


- 1. Appuyez sur MENU puis sur ◀ ou ▶ pour afficher le menu OPTION.
- 2. Appuyez sur \blacktriangle ou \blacktriangledown pour mettre en surbrillance BLOC..
- 3. Appuyez sur ◀ ou ▶ pour afficher le menu BLOCAGE.
- 4. Utilisez les touches numériques (0-9) pour saisir votre code d'accès puis appuyez sur ENTER. Le menu BLOC. apparaît.
- 5. Appuyez sur ▲ ou ▼ pour mettre en surbrillance Minuterie Jeux (GameTimer).
- 6. Appuyez sur ◀ ou ▶ pour sélectionner une limite de temps (30 minutes, 60 minutes, 90 minutes 120 minutes ou ARR).
- 7. Appuyez sur EXIT pour retourner à un écran normal. Une fois que GameTimer a été programmée, l'affichage apparaîtra rapidement toutes les dix minutes pour vous rappeler que GameTimer est en cours de fonctionnement. Lorsque l'heure programmée est atteinte, l'écran change automatiquement le canal.



BLOCAGE VIDEO ARRET VIDEO VIDEO+


SUIVANT ▶

MINUTERIE JEUX ARRET NOUVEAU CIP

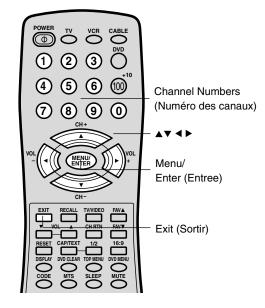

Remarque:

Après avoir programmé VIDEO LOCK, changez les canaux ou appuyez sur la touche TV/VIDEO avant d'éteindre le téléviseur.

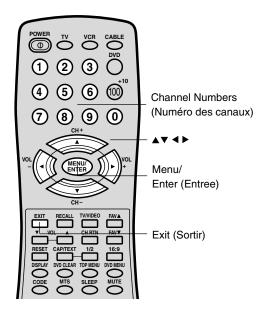






Attribution d'un nom aux différents canaux


Le nom des canaux apparaîtra sur le numéro du canal chaque fois que vous allumerez le téléviseur, sélectionnerez un canal, ou chaque fois que vous appuierez sur la touche RECALL (rappel). Vous pouvez choisir n'importe quel numéro à quatre chiffres pour identifier un canal.

Pour créer des noms des canaux:


- 1. Sélectionnez un canal auquel vous souhaitez attribuer un nom.
- 2. Appuyez sur MENU, puis sur ◀ ou ▶ jusqu'à ce que le menu OPTION apparaisse.
- 3. Appuyez sur ▲ ou ▼ pour mettre en surbrillance S-TIT CANAL.

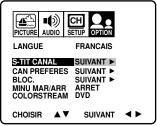

4. Appuyez sur ◀ ou ▶ pour afficher le menu S-TIT CANAL. REGLAGE/EFFACE sera mis en surbrillance.

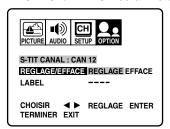

- 5. Appuyez sur ◀ ou ▶ pour mettre en surbrillance REGLAGE.
- 6. Appuyez sur ▲ ou ▼ pour mettre en surbrillance LABEL.

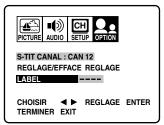

- 7. Appuyez sur ◀ ou ▶ pour entrer un caractère dans le premier espace. Appuyez plusieurs fois sur la touche jusqu'à ce que le caractère que vous souhaitez apparaisse à l'écran. Appuyez sur ENTER.
- 8. Répétez l'étape 7 pour entrer le reste des caractères.
 - Si vous voulez laisser un blanc dans le nom, vous devez choisir un espace vide dans la liste des caractères.
 - Sinon, un tiret apparaîtra dans cet espace.
- 9. Répétez les étapes 1 à 8 pour les autres canaux. Vous pouvez affecter une étiquette à chaque canal.
- 10. Appuyez sur EXIT pour effacer l'écran.

Pour supprimer les noms des canaux:

- 1. Sélectionnez le canal auquel vous souhaitez attribuer un nom.
- 2. Appuyez sur MENU, puis sur ◀ ou ▶ jusqu'à ce que le menu OPTION apparaisse.
- 3. Appuyez sur ▲ ou ▼ pour mettre en surbrillance S-TIT CANAL.
 4. Appuyez sur ◀ ou ▶ pour afficher le menu S-TIT CANAL. REGLAGE/EFFACE sera mis en surbrillance.
- 5. Appuyez sur ◀ ou ▶ pour mettre en surbrillance EFFACE.
- 6. Appuyez sur ENTER.
- 7. Répétez les étapes 1 à 6 pour supprimer le nom des autres canaux.


21

EFTUP OPTION

REGLAGE/EFFACE REGLAGE


CHOISIR ◀► REGLAGE ENTER TERMINER EXIT

S-TIT CANAL : CAN 12

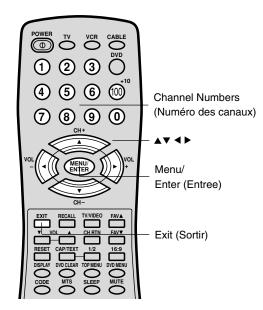

Remarque:


Le caractère change comme suit.






Vous devez régler l'heure avant de pouvoir programmer la minuterie MAR/ARR. Réglage de l'horloge: (Exemple: On veut régler l'horloge à 8h30 du matin)


- 1. Appuyez sur MENU, puis appuyez sur ◀ ou ▶ jusqu'à ce que le menu OPTION apparaisse.
- 2. Appuyez sur ▲ ou ▼ pour mettre en surbrillance MINU MAR/ARR.

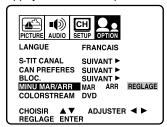

- 3. Appuyez sur ◀ ou ▶ pour mettre en surbrillance REGLAGE, puis ENTER. MINU MAR/ARR apparaît.
- 4. Appuyez sur ▲ ou ▼ pour mettre en subrillance HORLOGE. Appuyez ensuite sur ◀ ou ▶ pour mettre la position des heures en surbrillance.

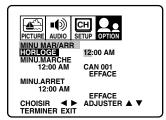

5. Appuyez sur ▲ ou ▼ pour régler l'heure, puis sur ▶ pour mettre la position des minutes en surbrillance.

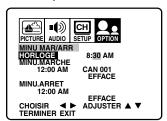

6. Appuyez sur ▲ ou ▼ pour régler les minutes puis sur EXIT pour revenir à l'écran normal.


Pour régler l'heure de mise sous/hors tension


Pour régler l'heure de mise sous tension

Cette fonction vous permet de programmer la TV pour qu'elle s'allume automatiquement à l'heure définie. Si vous programmez l'heure de mise sous tension sur "QUOT", la TV s'allumera tous les jours à la même heure sur le même canal jusqu'à ce que vous effaciez l'heure de mise sous tension.

Pour régler l'heure de mise sous tension: (Exemple: Mise sous tension du téléviseur sur le canal 12 à 7h00 du matin)


- 1. Appuyez sur MENU, puis appuyez sur ◀ ou ▶ jusqu'à ce que le menu OPTION apparaisse.
- 2. Appuyez sur ▲ ou ▼ pour mettre en surbrillance MINU MAR/ARR.
- 3. Appuyez sur ◀ ou ▶ pour mettre en surbrillance REGLAGE, puis ENTER. MINU MAR/ARR apparaît.
- 4. Appuyez sur ▲ ou ▼ pour mettre en surbrillance MINU.MARCHE et appuyez sur ◀ ou ▶ pour mettre la position des heures en surbrillance.

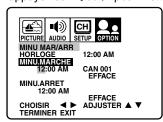

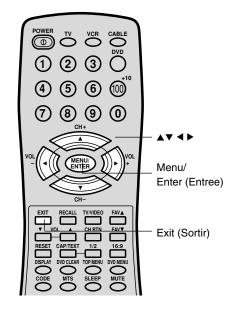


Remarque:

Si la source d'alimentation de la TV est coupée (le fil est par exemple débranché ou en cas de coupure de courant), vous devez à nouveau régler l'horloge.

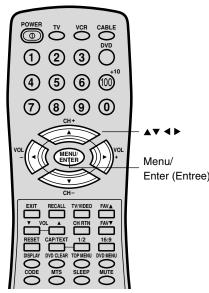

Remarque:

Quand le courant a une interruption ou une panne, le réglage sera perdu.

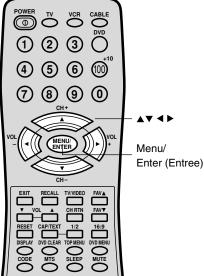

22

J3N12621A(F)_P17-26 6/12/05, 9:59 AM 5. Appuyez sur ▲ ou ▼ pour régler l'heure puis sur ▶.



- 6. Réglez les minutes et le canal comme il convient en suivant la procédure indiquée à l'étape 5.
- 7. Appuyez sur ◀ ou ▶ pour sélectionner 1 FOIS ou QUOT.



8. Appuyez sur EXIT pour retourner à un écran normal.

Pour annuler la mise sous tension de la minuterie:

Sélectionnez EFFACE à l'étape 7 ci-dessus. Appuyez sur EXIT pour retourner à un écran normal.

Pour régler l'heure de mise hors tension


Cette fonction vous permet de programmer la TV pour qu'elle s'éteigne automatiquement à l'heure définie. Si vous programmez l'heure de mise hors tension sur "QUOT", elle s'éteindra tous les jours à la même heure.

Pour régler l'heure de mise hors tension: (Exemple: Mise hors tension du téléviseur à 11h30 du soir.)


- Appuyez sur MENU, puis appuyez sur

 ou

 jusqu'à ce que le menu
 OPTION apparaisse.
- 2. Appuyez sur ▲ ou ▼ pour mettre en surbrillance MINU MAR/ARR.
- 3. Appuyez sur ◀ ou ▶ pour mettre en surbrillance REGLAGE, puis ENTER. MINU MAR/ARR apparaît.
- 4. Appuyez sur ▲ ou ▼ pour mettre en surbrillance MINU.ARRET, puis appuyez sur ◀ ou ▶ pour mettre la position des heures en surbrillance.




5. Appuyez sur ▲ ou ▼ pour régler l'heure puis sur ▶.



- Réglez les minutes comme il convient en suivant la procédure indiquée à l'étape 5.
- 7. Appuyez sur ◀ ou ▶ pour sélectionner 1 FOIS ou QUOT.




8. Appuyez sur EXIT pour retourner à un écran normal.

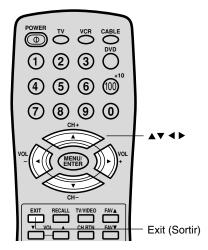

Remarque:

L'heure de mise sous tension comporte une fonction de mise hors tension automatique après 1 heure. Une heure après que l'heure de mise sous tension ait allumé la télévision, cette dernière s'éteint automatiquement sauf si vous appuyez sur une touche.

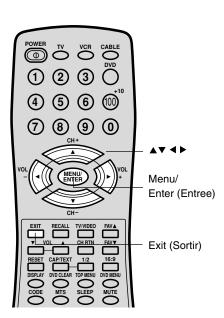

Pour annuler la mise hors tension de la minuterie:

6/12/05, 9:59 AM

Sélectionnez EFFACE (effacer) à l'étape 7 ci-dessus. Appuyez sur EXIT pour retourner à un écran normal.

23

J3N12621A(F)_P17-26 23






Vous pouvez régler la qualité de l'image selon vos préférences, y compris le contraste, la luminosité, la couleur, la teinte et la netteté. Les paramètres de qualité que vous choisissez seront mémorisés de façon à ce que vous puissiez les rappeler à tout moment.

Pour régler la qualité de l'image:

1. Appuyez sur MENU, puis sur ◀ ou ▶ pour mettre en surbrillance le menu PICTURE.



- 2. Appuyez sur ▲ ou ▼ jusqu'à ce que le paramètre que vous souhaitez régler soit mis en surbrillance.
- 3. Appuyez sur ◀ ou ▶ pour effectuer le réglage.

Sélectionner	◄ Appuy	er sur 🕨
contraste	moins	plus
luminosité	plus sombre	plus clair
couleur	moins	plus
teinte	plus rouge	plus vert
netteté	moins net	plus net

4. Appuyez sur EXIT pour retourner à un écran normal.

Regarder une image provenant d'une source d'entrée vidéo

Vous pouvez utiliser la touche TV/VIDEO sur la télécommande pour visualiser un signal provenant d'autres appareils, tels que les magnétoscopes ou les lecteurs de disques vidéo qui peuvent être connectés à votre téléviseur. (Voir "Branchement de votre téléviseur" sur la page 7.)

Spécifier le réglage ColorStream®

Vous pouvez utiliser le ColorStream (vidéo à composante) pour connecter un lecteur DVD ou un récepteur DTV.

Remarque: Ce téléviseur n'est pas prêt pour le HD.


- 1. Appuyez sur TV/VIDEO pour mettre la TV dans le mode de ColorStream.
- 2. Appuyez sur MENU, puis appuyez sur ◀ ou ▶ jusqu'à ce que le menu OPTION apparaisse.
- 3. Appuyez sur ▲ ou ▼ pour mettre COLORSTREAM en surbrillance.
- 4. Appuyez sur ◀ ou ▶ pour mettre DVD ou DTV en surbrillance, en fonction de l'appareil connecté.
- 5. Appuyez sur EXIT pour retourner à un écran normal.

Remarque: Le réglage de l'usine est DVD.

Affichage des informations à l'écran

Appuyez sur RECALL (rappel) pour afficher les informations suivantes à l'écran:

- Horloge
- Numéro de canal ou mode VIDEO sélectionné
- Nom du canal (si pré-réglé)
- Sélection audio Stéréo ou SAP (programme secondaire audio)



CHOISIR ▲▼ ADJUSTER ◀▶


LANGUE

Pour ré-initialiser les réglages de l'image sur la position de pré-réglage en usine, appuyez sur RESET.

Pour choisir le mode d'entrée:

Appuyez répétitivement sur la touche TV/ VIDEO pour choisir le mode souhaité. Le signal de la source à laquelle vous êtes connecté est affiché en bleu clair.



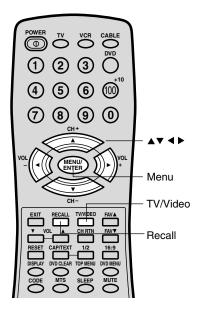





Programmation de l'arrêt différé (SLEEP)

Vous pouvez programmer le téléviseur pour qu'il passe automatiquement en mode veille.

Pour régler la minuterie d'arrêt différé:

Appuyez plusieurs fois sur la touche SLEEP de la télécommande pour établir quand le téléviseur s'éteindra. L'heure affichée reculera de 10 minutes à chaque pression, c'est-à-dire qu'elle comptera 120, 110, 100...20, 10, 0. Après la programmation de la durée avant l'arrêt différé, le chiffre affiché disaparaît puis réapparaît temporairement toutes les dix minutes pour rappeler que cette fonction est activée.

Pour vérifier la durée restante:

Appuyez une fois sur la touche SLEEP. Cette durée sera temporairement affichée.

Pour désactiver cette fonction:


Appuyez de façon répétée la touche SLEEP jusqu'à ce que l'affichage indique "0".

Utilisation de la fonction sous-titrage


Avec la fonction sous-titrage, il existe deux options : sous-titres ou télétexte. Un sous-titre est la version imprimée d'un dialogue, d'une narration et/ou des effets acoustiques d'une émission de TV. Le télétexte contient des informations sans rapport avec le programme, apparaissant sur une moitié de l'écran si présente.

Pour visualiser les sous-titres ou le télétexte:

- 1. Sélectionnez l'émission désirée. Les programmes sous-titrés sont souvent indiqués dans votre magazine TV local par la mention "CC."
- 2. Appuyez répétitivement sur CAP/TEXT pour choisir le mode de sous-titres ou de télétexte.



3. Appuyez sur 1/2 pour choisir le canal de sous-titres ou de télétexte.



4. Pour mettre hors service la fonction de sous-titres, appuyez répétitivement sur CAP/TEXT jusqu'à ce que les sous-titres ou textes ne soient plus affichés à l'écran.

Modification de la taille de l'image


Vous pouvez changer la taille de l'image au format 16:9 (grand écran).

Pour afficher le format 16:9:

Sélectionnez le programme de votre choix puis appuyez sur 16:9. L'image sera affichée au format 16:9. 16:9 s'affichera à l'écran pendant environ 4 secondes.

Pour annuler le format 16:9:


Appuyez à nouveau sur 16:9. L'image s'affichera à nouveau au format 4:3.



Normal 4:3



25

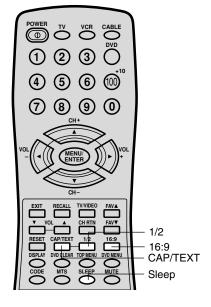

Remarque:

Un signal avec des sous-titres peut ne pas être décodé correctement dans les cas suivants:

- · Quand une cassette vidéo a été copiée.
- Quand le signal de réception est faible.
- Quand le signal de réception n'est pas


Quand vous choisissez un canal de soustitres et le mode de télétexte, l'écran de texte reste affiché en permanence. Cependant, quand il n'y pas de signal, aucun caractère n'apparaît sur l'écran de texte.

Appuyez de façon répétée sur CAP/TEXT jusqu'à ce que la boîte disaparaisse.

AVIS SUR LES EFFETS NÉFASTES POTENTIELS POUR LE TUBE ÉCRAN

Éviter d'afficher des images stationnaires à l'écran du téléviseur pendant des périodes prolongées. Les images fixes (Comme les barres noires/grises en les formats d'image grand-écran, les fenêtres de jeux vidéo, les logos de stations de télévision, ou les sous-titrages) peuvent se graver définitivement sur le tube écran. Ce genre de dommage N'EST PAS

COUVERT PAR LA GARANTIE.





Coupure du son

Appuvez sur MUTE (son coupé) pour couper temporairement le son. Alors que le son est coupé, l'écran affichera le terme "MUET" dans l'angle inférieur droit. Pour rétablir le son, réappuyez sur MUTE.

Sélection des émissions stéréo/SAP

Vous pouvez écouter un son stéréo haute-fidélité grâce à la fonction MTS (Son multi-canaux). Le système MTS peut également transmettre un programme secondaire audio (SAP), contenant une deuxième langue et d'autres informations audio.


Lorsque le téléviseur reçoit une émission en stéréo ou en SAP, le terme "STEREO" ou "SAP" apparaît à l'écran à chaque fois que vous allumez la télévision, que vous changez de canal ou que vous appuyez sur la touche RECALL.

La fonction MTS (son multi-canaux) n'est pas disponible en mode VIDEO.


Vous pouvez laisser votre téléviseur sur la position STEREO pour pouvoir sortir automatiquement des émissions en stéréo ou en mono, selon le type d'émissions. Si le son est trop fort en stéréo, sélectionnez MONO pour réduire le bruit. Le terme "STEREO" ou "SAP" est affiché en bleu clair lorsque le téléviseur reçoit le signal.

Pour sélectionner les réglages MTS souhaités:

Appuyez plusieurs fois sur la touche MTS pour sélectionner STEREO, SAP, MONO+SAP, ou MONO. Si le programme en cours de visualisation n'est pas disponible en stéréo ou SAP, les réglages ne seront pas disponibles lorsque vous appuyez sur la touche MTS.



Si le programme en cours n'est pas transmis en stéréo ou en SAP, ces réglages ne sont pas valides lorsque vous appuyez sur la touche MTS.

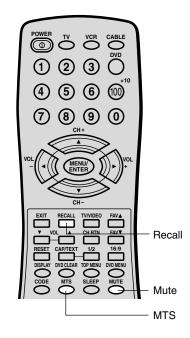




Réglage de la qualité du son


Vous pouvez changer la qualité du son de votre téléviseur en réglant les graves, les aigus et la balance.

Pour régler la qualité du son:

1. Appuyez sur MENU, puis sur ◀ ou ▶ jusqu'à ce que le menu AUDIO apparaisse.

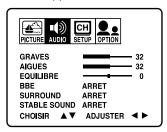

- 2. Appuyez sur ▲ ou ▼ pour mettre en surbrillance le paramètre que vous souhaitez régler.
- 3. Appuyez sur ◀ ou ▶ pour effectuer le réglage.

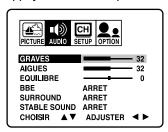


- ◀ diminue la qualité du son ou de balance dans le canal de droite, selon le paramètre sélectionné.
- ▶ renforce la qualité du son ou diminue la balance dans le canal de gauche, selon le paramètre sélectionné.

Utilisation de la fonction BBE sound

En corrigeant le retard de phase et la distorsion produite naturellement par les systèmes de haut-parleurs, la fonction son BBE sound assure que le son qui atteint vos oreilles est aussi naturel que le son d'origine. Les voix humaines sont claires et la musique est naturelle et bien définie.


Pour activer la fonction BBE:

- 1. Appuyez sur MENU, puis sur ◀ ou ▶ jusqu'à ce que le menu AUDIO apparaisse.
- 2. Appuyez sur ▼ ou ▲ pour mettre en surbrillance BBE.
- 3. Appuyez sur ◀ ou ▶ pour mettre en surbrillance MARCHE.

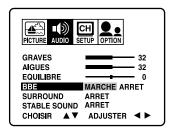


Pour désactiver la fonction BEE:

Sélectionnez ARRET à l'étape 3 ci-dessus.

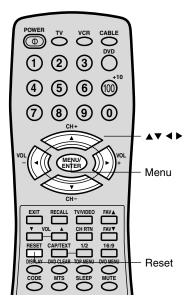

Remarque:

Pour ré-initialiser les réglages audio sur la position de pré-réglage en usine, appuyez sur

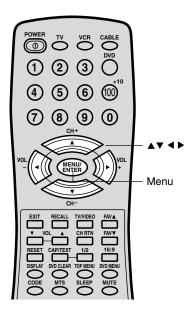

Sous licence de BBE Sound, Inc., sous les brevets USP5510752 et 5736897. BBE et le symbole BBE sont des marques déposées de BBE Sound, Inc.






La fonction de son ambiophonique agrandit et approfondit le champ d'écoute pour créer une qualité de son exceptionnelle en provenance des haut-parleurs du téléviseur. La fonction utilise des signaux stéréo d'une diffusion TV ou d'une entrée vidéo.

Pour activer la fonction de son ambiophonique:

- 1. Sélectionnez le mode STEREO, si disponsible (cf. "Sélection des émissions stéréo/SAP" page 26.)
- 2. Apppuyez sur MENU puis sur ◀ ou ▶ jusqu'à l'aparition du menu
- 3. Appuyez sur ▲ ou ▼ pour mettre en surbrillance SURROUND.
- 4. Appuyez sur ◀ ou ▶ pour mettre en surbrillance MARCHE.

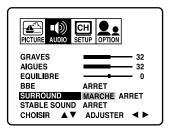

Pour désactiver la fonction de son ambiophonique:

Mettez ARRET en surbrillance comme à l'étape 4 ci-dessus.


En général, vous pouvez laisser votre téléviseur en mode surround car il émettra automatiquement le type de son à diffuser (ambiophonique ou monaural).

Utilisation de la fonction StableSound®

La fonction StableSound permet de limiter le volume le plus élevé pour éviter des variations de volume trop importantes lorsque la source du signal est changée.

Pour activer la fonction StableSound®:

- 1. Appuyez sur MENU, puis sur ◀ ou ▶ jusqu'à ce que le menu AUDIO apparaisse.
- 2. Appuyez sur ▼ ou ▲ pour mettre en surbrillance STABLE

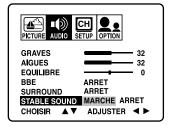

Pour désactiver la fonction StableSound®:

Sélectionnez ARRET à l'étape 3 ci-dessus.


Mise en mode veille automatique

Le téléviseur passe automatiquement en mode veille après une durée approximative de 15 minutes s'il est réglé sur un canal non attribué ou le canal termine la diffusion de ses programmes en fin de journée. Cette fonction n'est pas disponible en mode VIDEO.

Comprendre la fonction du mode mémoire

Si la tension électrique est momentanément coupée pendant que vous regardez le téléviseur, la fonction du mode mémoire ré-allumera automatiquement le téléviseur.

Si vous prévoyez de ne pas utiliser le téléviseur pendant une longue periode, débranchez le cordon d'alimentation de la prise murale pour éviter que le téléviseur se réallume pendant votre absence.

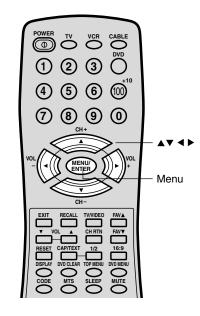





Annexe

Dépannage

Avant d'appeler un technicien, vérifiez le tableau suivant pour essayer de trouver la cause du problème et la solution.

Problème	Solution
Le téléviseur ne s'allume pas	 Vérifiez que le cordon d'alimentation est bien branché, puis appuyez sur POWER. Les piles sont peut-être usées. Remplacez les piles.
Pas d'image, ni de son	 Vérifiez le branchement de l'antenne et du câble. Ce téléviseur ne recevra pas ou n'affichera pas des signaux de vitesse de balayage progressif 480p ou 720p ou des signaux d'haute définition entrelacé 1080i par ses prises ColorStream. Vous devez d'abord commuter l'autre appareil au mode entrelacé 480i (page 9).
Image bonne, mais pas de son	 Le son est peut-être coupé. Appuyez sur VOLUME. La station peut avoir des problèmes d'émission. Essayez un autre canal. La fonction MTS peut se trouver en mode SAP. Appuyez sur la touche MTS de la télécomamnde jusqu'à ce que le mode STEREO (ou MONO) soit activé.
Image bonne, mais son de mauvaise qualité	 La station peut avoir des problèmes d'émission. Essayez un autre canal. La fonction MTS peut se trouver en mode SAP. Appuyez sur la touche MTS de la télécommande jusqu'à ce que le mode STEREO (ou MONO) soit activé.
Image de mauvaise qualité et son correct	 Vérifiez le branchement de l'antenne. La station peut avoir des problèmes d'émission. Essayez un autre canal. Réglez le menu PICTURE. Ce téléviseur ne recevra pas ou n'affichera pas des signaux de vitesse de balayage progressif 480p ou 720p ou des signaux d'haute définition entrelacé 1080i par ses prises ColorStream. Vous devez d'abord commuter l'autre appareil au mode entrelacé 480i (page 9).
Mauvaise réception des canaux	 La station peut avoir des problèmes d'émission. Essayez un autre canal. Vérifiez le branchement de l'antenne. Si vous utilisez un magnétoscope, assurez-vous que la touche TV/VCR est sur la bonne position.
Ne recoit pas de canal au delà du 13	Assurez-vous que la fonction TV/CABLE dans le menu SETUP est réglée au mode "CABLE".
Ne peut pas sélectionner un canal spécifique	Le canal a peut-être été bloqué avec la fonction BLOCAGE CANAL ou effacé avec la fonction add/erase.
Ne peut pas accéder aux sources d'entrées du signal (Video1, Video2, Video3 et ColorStream) et/ou aux canaux 3 et 4	Vérifiez la fonction BLOCAGE VIDÉO.
Image dédoublée	 La station peut avoir des problèmes d'émission. Essayez un autre canal. Utilisez une antenne extérieure directionnelle.
Mauvaise qualité de la couleur ou pas de couleur	 La station peut avoir des problèmes d'émission. Essayez un autre canal. Réglez la TEINTE et/ou la COULEUR dans le menu PICTURE. Si vous bougez le téléviseur alors qu'il est allumé, l'image peut présenter des hachures de couleurs. Si c'est le cas, éteignez le téléviseur et attendez qu'il refroidisse pendant plusieurs heures avant de le rallumer.
Boîte noire sur l'écran	Appuyez répétitivement sur CAP/TEXT jusqu' à ce que les sous-titres ou textes ne soient plus affichés à l'écran.
Pas de son stéréo ou SAP provenant d'une émission MTS (Son multi-canaux) connue	Vérifiez que la fonction MTS est bien réglée.
Le code d'accès ne fonctionne pas	Changez ou recomposez votre code d'accès (pages 18 et 19).
La télécommande ne fonctionne pas	 Assurez-vous que le mode TV/VCR/DVD/CABLE est bien réglé sur la télécommande. Assurez-vous qu'il n'y ait aucun obstacle entre la télécommande et le téléviseur. Les piles sont peut-être usées. Remplacez les piles.





- Ce modèle est conforme aux spécifications répertoriées ci-dessous.
- Les désigns et spécifications sont sujets à des changements sans préavis.
- Il est possible que ce modèle ne soit pas compatible avec des caractéristiques et/ou spécifications qui peuvent être ajoutées dans le futur.

Tube écran	676 mm (27 pouces) diagonale (La dimension de l'écran est approximative.)	
Système de télévision	NTSC standard	
Couverture des canaux	VHF: 2 à 13	
	UHF: 14 à 69	
	Câble TV: 4A, A-5 à A-1, A-I,	
	J à W, W+1 à W+84	
Source d'alimentation	120V CA, 60 Hz	
Consommation de courant	135 W	
Puissance de sortie audio	5W + 5W	
Type de haut-parleur	45,7 mm x 99,1 mm (1-13/16 pouces x 3-7/8 pouces) x 2	
Bornes Vidéo/Audio	ENTREE S-VIDEO	
	ENTREE-Y: 1V (p-p), 75 ohms, synchronisation négative.	
	ENTREE-C: 0,286V (p-p) (signal de salve), 75 ohms	
	ENTREE VIDEO/AUDIO	
	VIDEO: 1V (p-p), 75 ohms, synchronisation négative.	
	AUDIO: 150 mV (rms) (30%) modulation équivalente, 47k ohms)	
	ENTREE ColorStream® (vidéo à composante)	
	Y : 1V (p-p), 75 ohms	
	PR : 0,7V (p-p), 75 ohms	
	PB: 0,7V (p-p), 75 ohms	
	SORTIE VIDEO/AUDIO	
	VIDEO: 1V (p-p), 75 ohms, synchronisation négative.	
	AUDIO: 150 mV (rms) (30%) modulation équivalente, 47k ohms)	
Dimensions	Largeur : 740 mm (29-1/8 pouces)	
	Hauteur : 574,5 mm (22-5/8 pouces)	
	Profondeur: 495 mm (19-1/2 pouces)	
Poids	88,2 lbs (40 kg)	
Accessoires fournis	Télécommande fournie avec deux piles de type "AAA"	

Garantie limitée au Canada Pour tous les modèles téléviseurs 27 po. et moins

Toshiba du Canada Limitée (TCL) donne les garanties limitées suivantes. CES GARANTIES LIMITÉES SONT ACCORDÉES À L'ACHETEUR INITIAL DE CE PRODUIT OU À TOUTE PERSONNE L'AYANT REÇU EN CADEAU DE L'ACHETEUR INITIAL OU D'UN CESSIONNAIRE. LES PRODUITS ACHETÉS AUX CANADA ET UTILISÉS À L'EXTÉRIEUR DU CANADA, INCLUANT, SANS EXCEPTION, LES ÉTAT-UNIS ET LE MEXIQUE, NE SONT PAS COUVERTS PAR CES GARANTIES. LES PRODUITS ACHETÉS À L'EXTÉRIEUR DU CANADA, INCLUANT, SANS EXCEPTION, LES ÉTAT-UNIS ET LE MEXIQUE, ET UTILISÉS AU CANADA NE SONT PAS COUVERTS PAR CETTE GARANTIE.

Garantie limitée d'un (1) an sur les pièces et la main-d'œuvre*

TCL garantit ce téléviseur et ses pièces contre tout vice de matériau ou de fabrication pendant une période d'un (1) an à compter de la date à laquelle il a été initialement acheté chez un détaillant. PENDANT CETTE PÉRIODE, TCL DÉCIDERA UNILATÉRALEMENT DE RÉPARER LA PIÈCE DÉTACHÉE DÉFECTUEUSE OU DE LA REMPLACER PAR UNE PIÈCE DÉTACHÉE NEUVE OU REMISE À NEUF SANS VOUS FAIRE PAYER LE COÛT DES PIÈCES OU DE LA MAIN-D'OEUVRE. VOUS DEVEZ LIVRER CE TÉLÉVISEUR À UN DEPOT DE SERVICE AUTORISÉ TCL. LES FRAIS DE TRANSPORT ET D'ASSURANCE DE L'APPAREIL DE ET AU DEPOT DE SERVICE AUTORISÉ SONT À VOTRE CHARGE.

Garantie limitée de deux (2) ans sur tube écran*

TCL garantie en outre le tube écran de ce téléviseur contres les vices de matériaux ou de fabrication pendant une période de deux (2) ans à compter de la date de l'achat au détail. PENDANT CETTE PÉRIODE, TCL DÉCIDERA S'IL Y A LIEU DE RÉPARER OU D'ÉCHANGER LE TUBE ÉCRAN DÉFECTUEUX CONTRE UN NOUVEAU OU REMIS EN ÉTAT, GRATUITEMENT. SI UN TUBE ÉCRAN DÉFECTUEUX DOIT ÊTRE REMPLACÉ APRÈS UN AN À COMPTER DE LA DATE D'ACHAT AU DÉTAIL INITIAL, VOUS DEVREZ PAYER LES FRAIS DE MAIN D'OEUVRE, LIÉS AU REMPLACEMENT DE LA PIÈCE. VOUS DEVEZ LIVRER LE TÉLÉVISEUR À UN CENTRE DE SERVICE TCL AGRÉÉ. LES FRAIS DE TRANSPORT ET D'ASSURANCE DE L'APPAREIL DE ET AU CENTRE DE SERVICE AGRÉÉ SONT À VOTRE CHARGE.

Location d'appareils

La garantie pour des appareils loués commence à la première location ou trente (30) jours à compter de la date de livraison par la compagnie de location, selon ce qui arrive le premier.

*Garantie limitée sur les téléviseurs utilisés à des fins commerciales

TCL garantit les téléviseurs vendus et utilisés à des fins commerciales comme suit: toutes les pièces sont garanties contre tout vice de matériau ou de fabrication pendant une période de quatre-vingt-dix (90) jours à compter de la date à laquelle il a été initialement acheté chez un détaillant. PENDANT CETTE PÉRIODE, TCL DÉCIDERA S'IL Y A LIEU DE RÉPARER OU D'ÉCHANGER TOUT TÉLÉVISEUR OU PIÈCE DÉFECTUEUX CONTRE UN NOUVEAU OU REMIS EN ÉTAT, GRATUITEMENT: SI UNE PIÈCE DÉFECTUEUSE DOIT ÊTRE REMPLACÉE APRÈS LES QUATRE-VINGT-DIX (90) JOURS À COMPTER DE LA DATE D'ACHAT AU DÉTAIL INITIAL, VOUS DEVREZ PAYER LES FRAIS DE MAIN D'OEUVRE, LIÉS AU REMPLACEMENT DE LA PIÈCE. VOUS DEVEZ LIVRER LE TÉLÉVISEUR À UN CENTRE DE SERVICE TCL AGRÉÉ. LES FRAIS DE TRANSPORT ET D'ASSURANCE DE L'APPAREIL DE ET AU CENTRE DE SERVICE AGRÉÉ SONT À VOTRE CHARGE.

Guide de l'utilisateur et enregistrement du produit

Veuillez lire ce guide de l'utilisateur dans sa totalité avant de faire fonctionner ce téléviseur.

Veuillez l'enregistrer à **www.toshiba.ca** aussitôt que possible. En registrant votre produit, vous permettrez à TCL de vous offrir des nouveaux produits conçus pour rencontrer vos besoins et nous aidera à vous contacter dans l'éventualité peu probable qu'un avis de sécurité soit requis. Si vous n'enregistrez pas votre produit, ceci ne diminuera aucunement vos droits dont vous disposez sous cette garantie.

Vos responsabilités

LES GARANTIES CI-AVANT SONT SUJETTES AUX CONDITIONS SUIVANTES:

- (1) Vous devez fournir votre reçu d'achat ou toute autre preuve de l'acquisition.
- (2) Tous les services sous garantie pour ce téléviseur doivent être effectués par un centre de service TCL agréé.
- (3) Les garanties pour le Canada sont effectives seulement si le téléviseur à été acheté d'un marchand autorisé et utilisé au Canada.
- (4) Les frais de main d'oeuvre pour l'installation, le réglage des commandes et l'installation de système d'antenne ne sont pas couverts par cette garantie. Nous ne sommes pas responsables des problèmes de réception provenant de systèmes d'antenne inadéquats.
- (5) Les garanties ne couvrent que les vices de matériaux ou de fabrication, tels que mentionnés ci-avant. Elles ne concernent pas un téléviseur ou une pièce perdu ou égaré par vous ou tout téléviseur ou pièce endommagé par une erreur d'utilisation, un accident, des dégâts causés par la foudre, des fluctuations de tension, une mauvaise installation, un entretien inadéquat ou une utilisation violant les explications fournies par TCL ou les téléviseurs ou pièces dont le numéro de série a été supprimé, altéré ou rendu illisible.

Pour obtenir les services sous garantie

Après avoir suivi les étapes de dépannage de votre mode d'emploi, vous avez besoin de service :

- Pour trouver le centre de service TCL agréé le plus prêt visitez le site web de TCL à www.toshiba.ca.
- (2) Présentez votre facture d'achat ou autre preuve d'achat à un centre de service agréé. Vous devez livrer le téléviseur au complet à un center de service TCL agréé. Les frais de transport et d'assurance du téléviseur de et au centre de service agréé sont à votre charge.

Pour plus d'informations, veuillez visiter le site Web de TCL à l'adresse suivante : www.toshiba.ca.

TOUTES LES GARANTIES IMPLICITES DE DROIT DE TOUTES LES PROVINCES DU CANADA, Y COMPRIS LES GARANTIES IMPLICITES DE QUALITÉ MARCHANDE ET D'ADAPTATION À UNE FIN PARTICULIÈRE, SONT LIMITÉES EXPRESSÉMENT À LA DURÉE DES GARANTIES LIMITÉES ÉNONCÉES CI-DESSUS. SAUF POUR CE QUI EST DES GARANTIES IMPLICITES DE DROIT, TELLES QUE LIMITÉES PAR LES PRÉSENTES, LA GARANTIE QUI PRÉCÈDE REMPLACERA TOUTES LES AUTRES REMPLACEMENTS DE PIÈCES. EN AUCUN CAS, TCL NE SERA TENU RESPONSABLE DE DOMMAGES INDIRECTS OU ACCESSOIRES (INCLUANT MAIS PAS LIMITÉ À DES PERTES DE PROFITS, ARRÊT D'AFFAIRES, OU MODIFICATION OU EFFACEMENT DES DONNÉES ENREGISTRÉES CAUSÉ PAR L'USAGE, L'ABUS OU L'EMPÊCHEMENT D'UTILISER CE PRODUIT).

Aucune personne, agent, distributeur, concessionnaire ou compagnie n'est autorisé à changer, modifier ou prolonger les termes de ces garanties de quelque façon que ce soit. Toute procédure visant à faire exécuter une obligation quelconque de TCL en vertu de cette garantie ou de toute loi du Canada ou d'une des provinces, doit être entamée dans les quatre-vingt-dix (90) jours suivant la date où vous découvrez ou devriez avoir découvert la défectuosité. Cette limitation ne s'applique pas aux garanties implicites de droit.

CETTE GARANTIE VOUS ACCORDE DES DROITS LÉGAUX PRÉCIS ET VOUS POUVEZ DISPOSER D'AUTRES DROITS QUI VARIENT D'UNE PROVINCE À L'AUTRE. CERTAINES PROVINCES NE PERMETTENT PAS DE LIMITATION DE LA DURÉE DES GARANTIES IMPLICITES OU DU DROIT DE PRESCRIPTION D'ACTION, D'EXCLUSION OU LA LIMITATION DES DOMMAGES INDIRECTS OU ACCESSOIRES. IL SE PEUT DONC QUE LES DISPOSITIONS PRÉCÉDENTES NE S'APPLIQUENT PAS DANS VOTRE CAS.









191 McNabb Street

Markham, Ontario L3R 8H2

TEL.: (905) 470-5400

Service Centers:

TORONTO: 191 McNABB STREET,

MARKHAM, ONTARIO, L3R 8H2, CANADA

TEL.: (905) 470-5400

MONTREAL: 18050 TRANS CANADA, KIRKLAND,

QUEBEC, H9J-4A1, CANADA

TEL.: (514) 390-7766

VANCOUVER: 22171 FRASERWOOD WAY,

RICHMOND, B.C., V62 1J5, CANADA

TEL.: (604) 303-2500

ColorStream®, FST Pure® et StableSound® sont des marques déposées de Toshiba America Consumer Products, L.L.C. GameTimer est une marque deposée de Toshiba America Consumer Products, L.L.C.

IMPRIMÉ EN THAÏLANDE

TOSHIBA

